


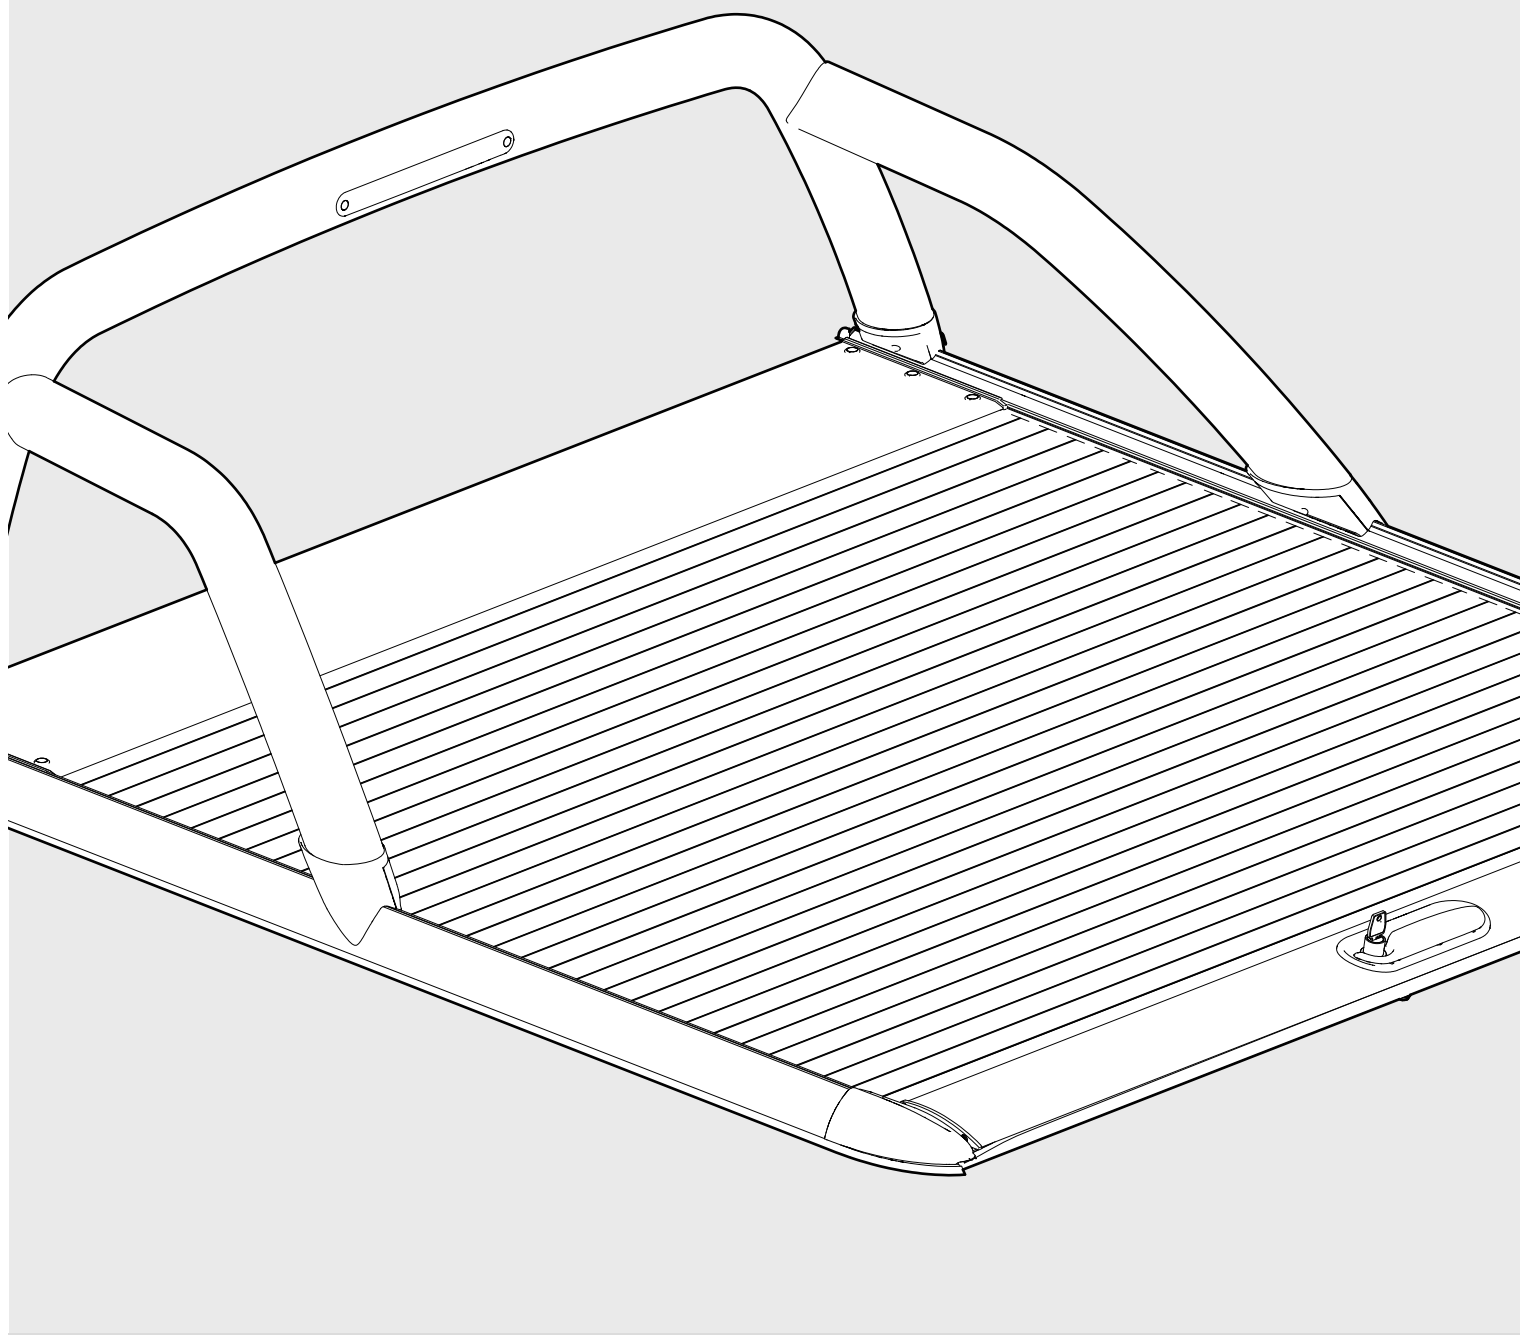




Roll Bar Mountain Top



















NOTICE DE MONTAGE

FORD RANGER 2012+





TELECHARGER PDF

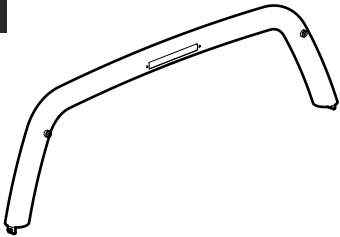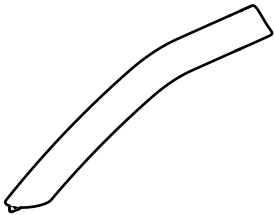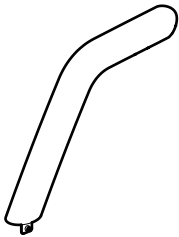Composants		
A		x 1
B		x 1
C		x 1

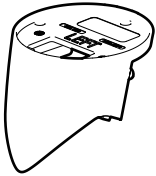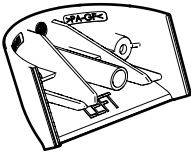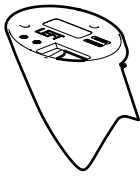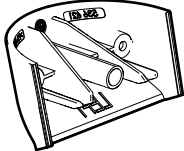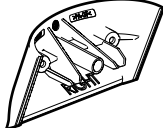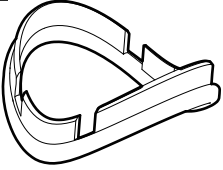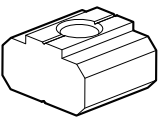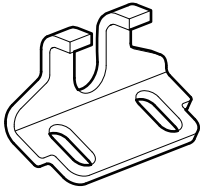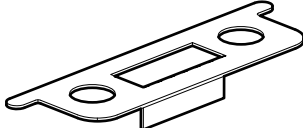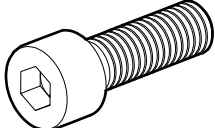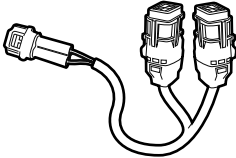

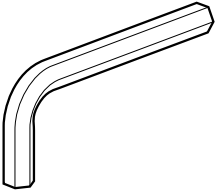
Kit		
D		x 1
E		x 1
F		x 1
G		x 1
H		x 1
I		x 1
J		x 1
K		x 1
L		x 2
M		x 6
N		x 8
O		x 2
P		x 8
Q		x 4
R		x 4
S		x 6
T		x 8
U		x 8
V		x 1
W		x 1
X		x 1
		x 1
		x 1







Outils requis

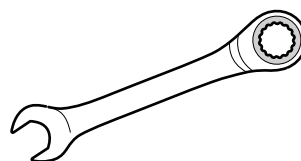
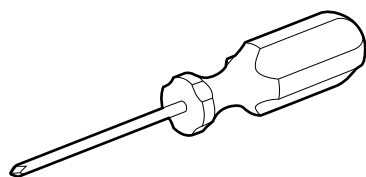




1-25 Nm

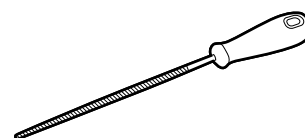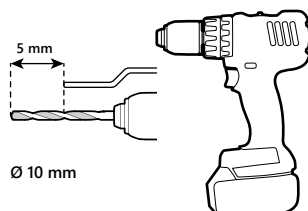
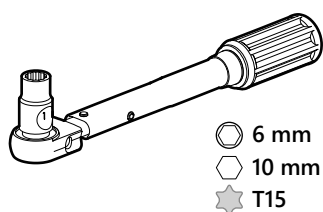


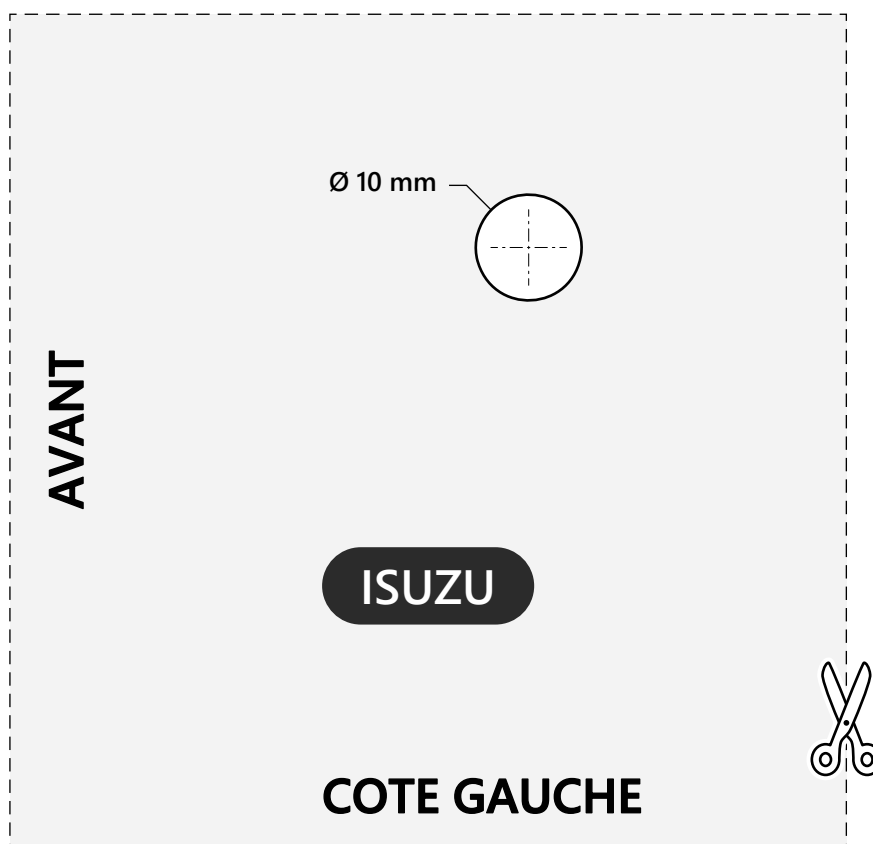
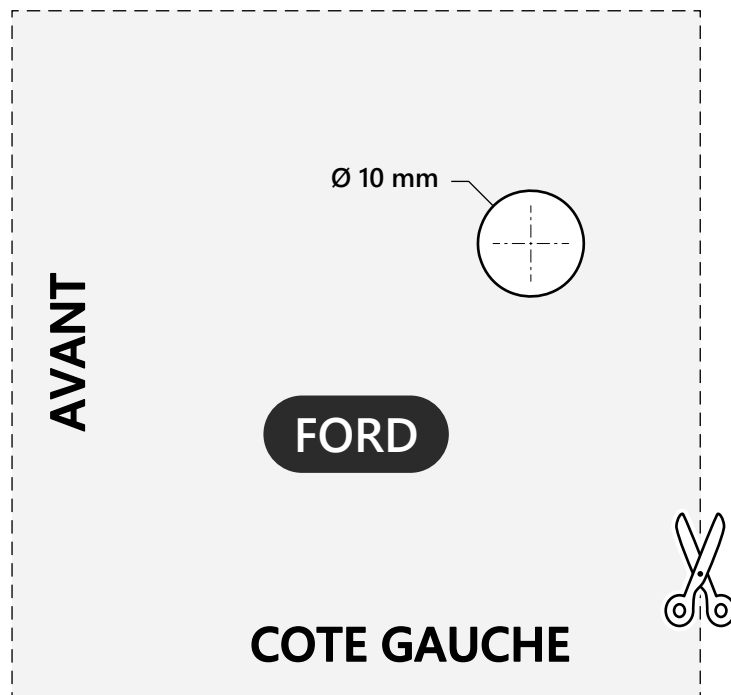


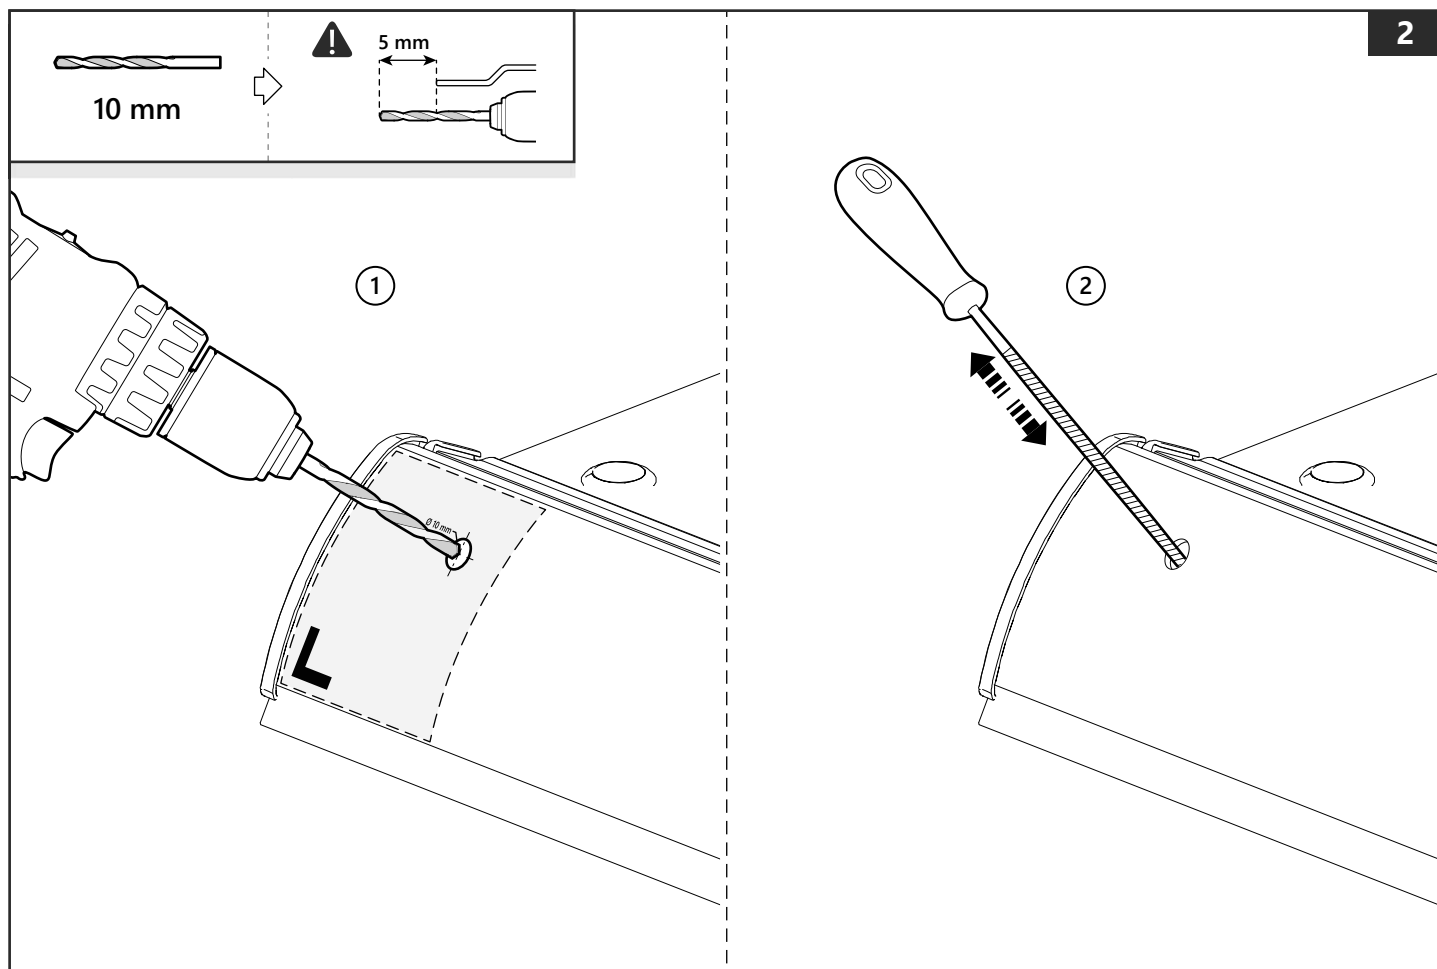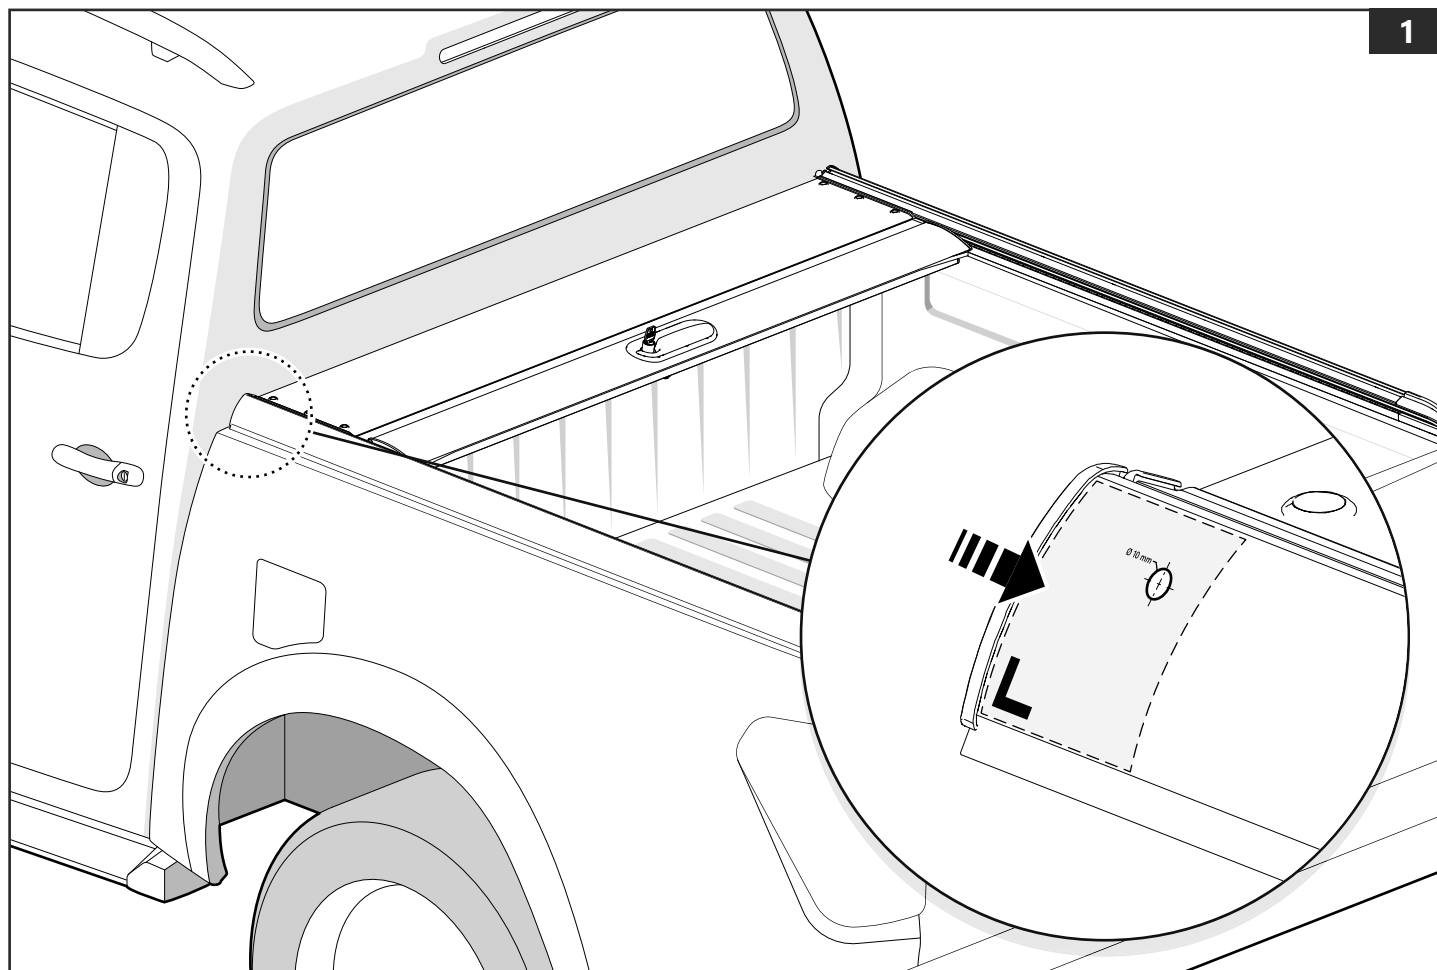

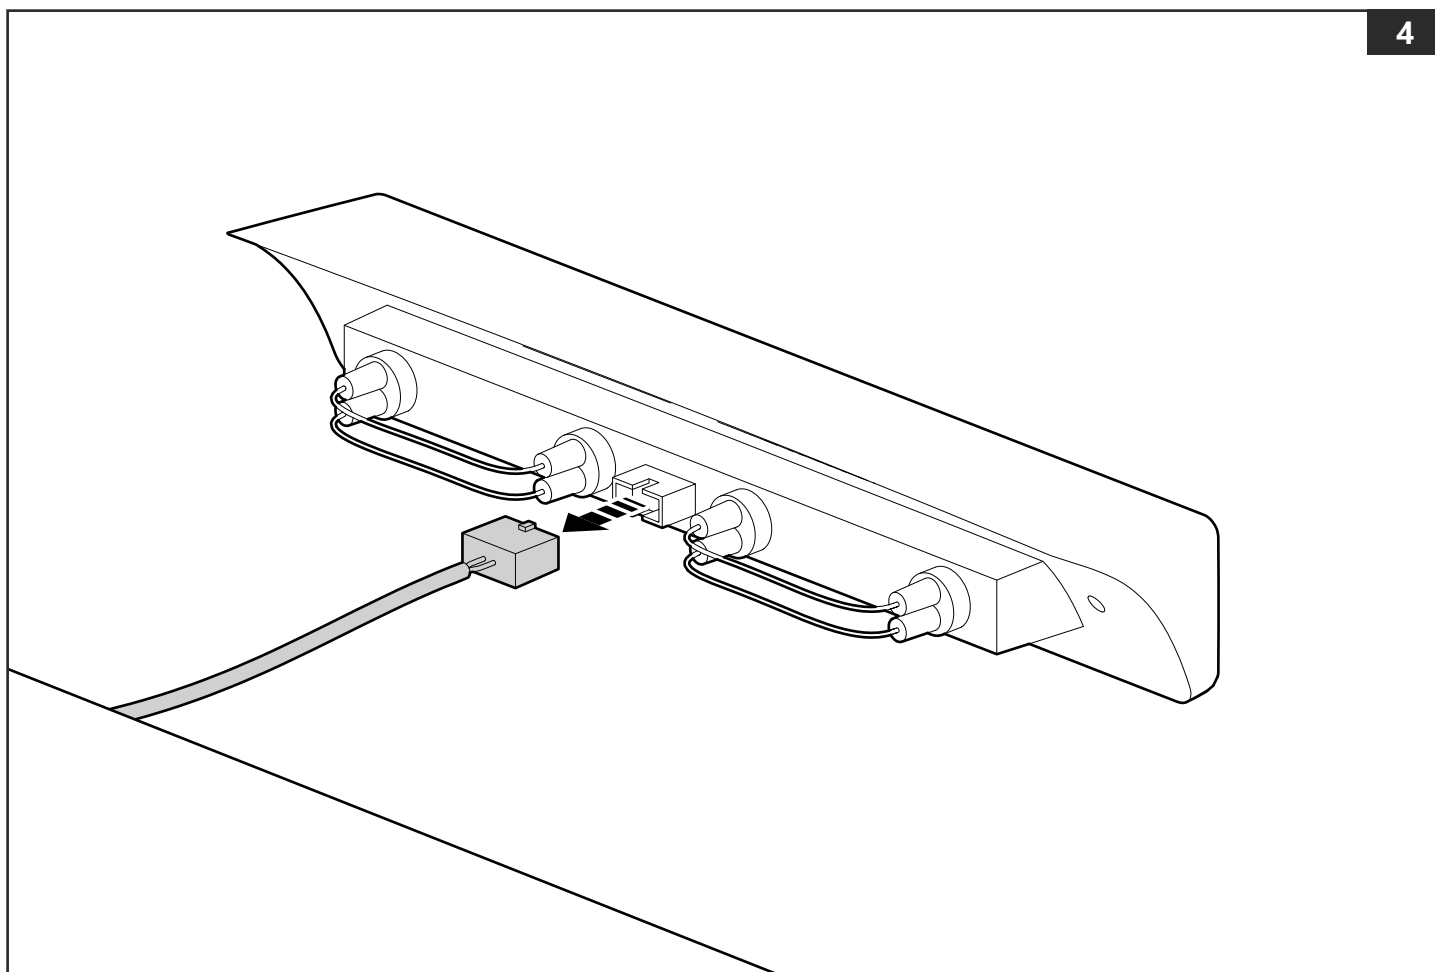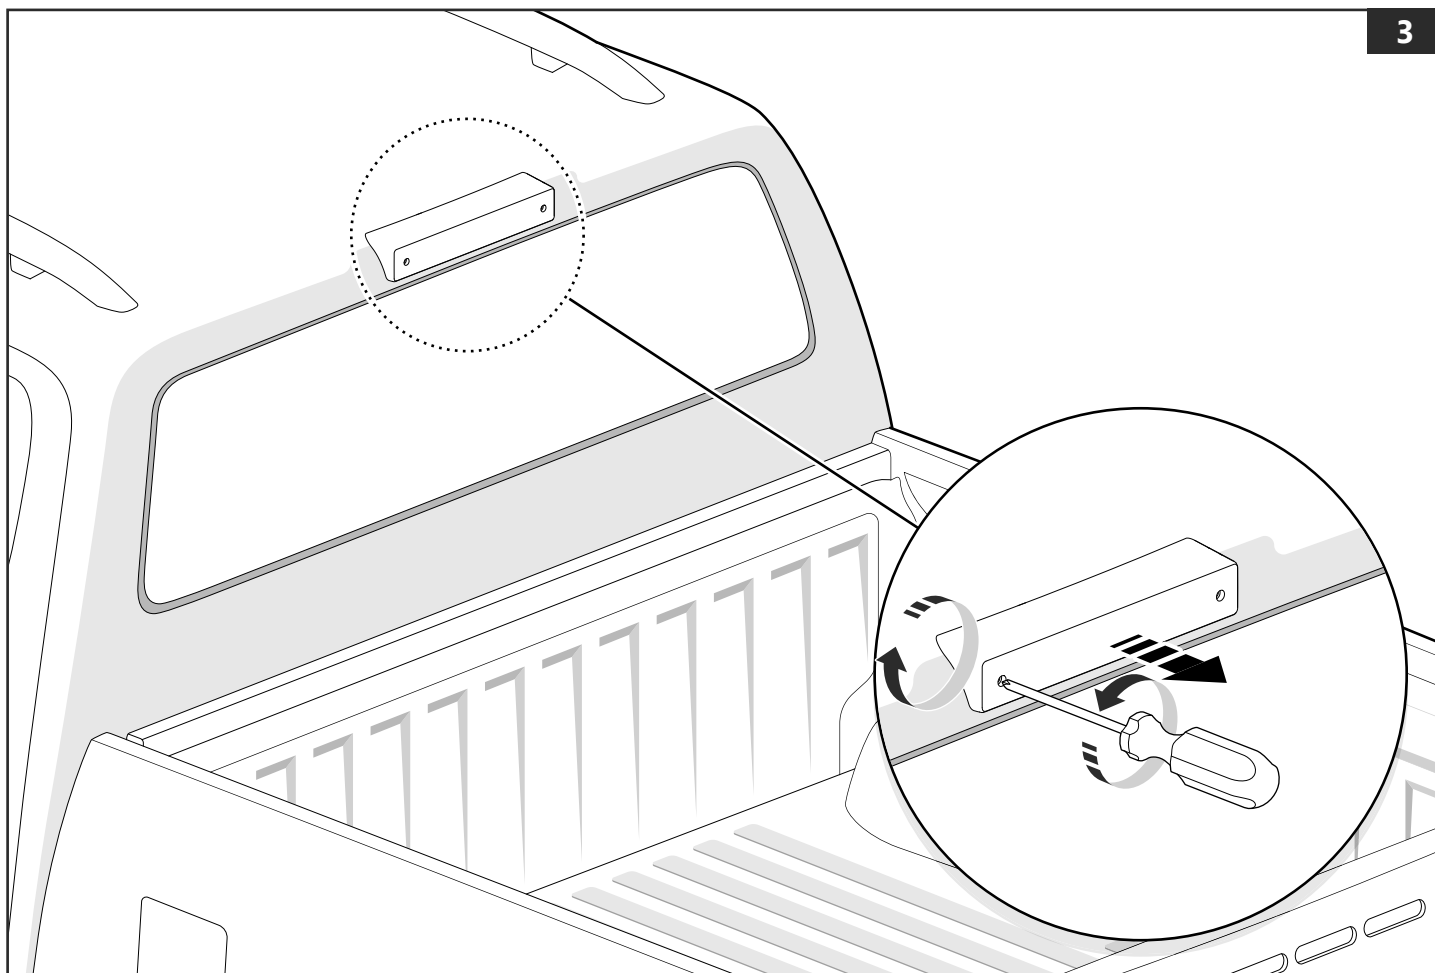


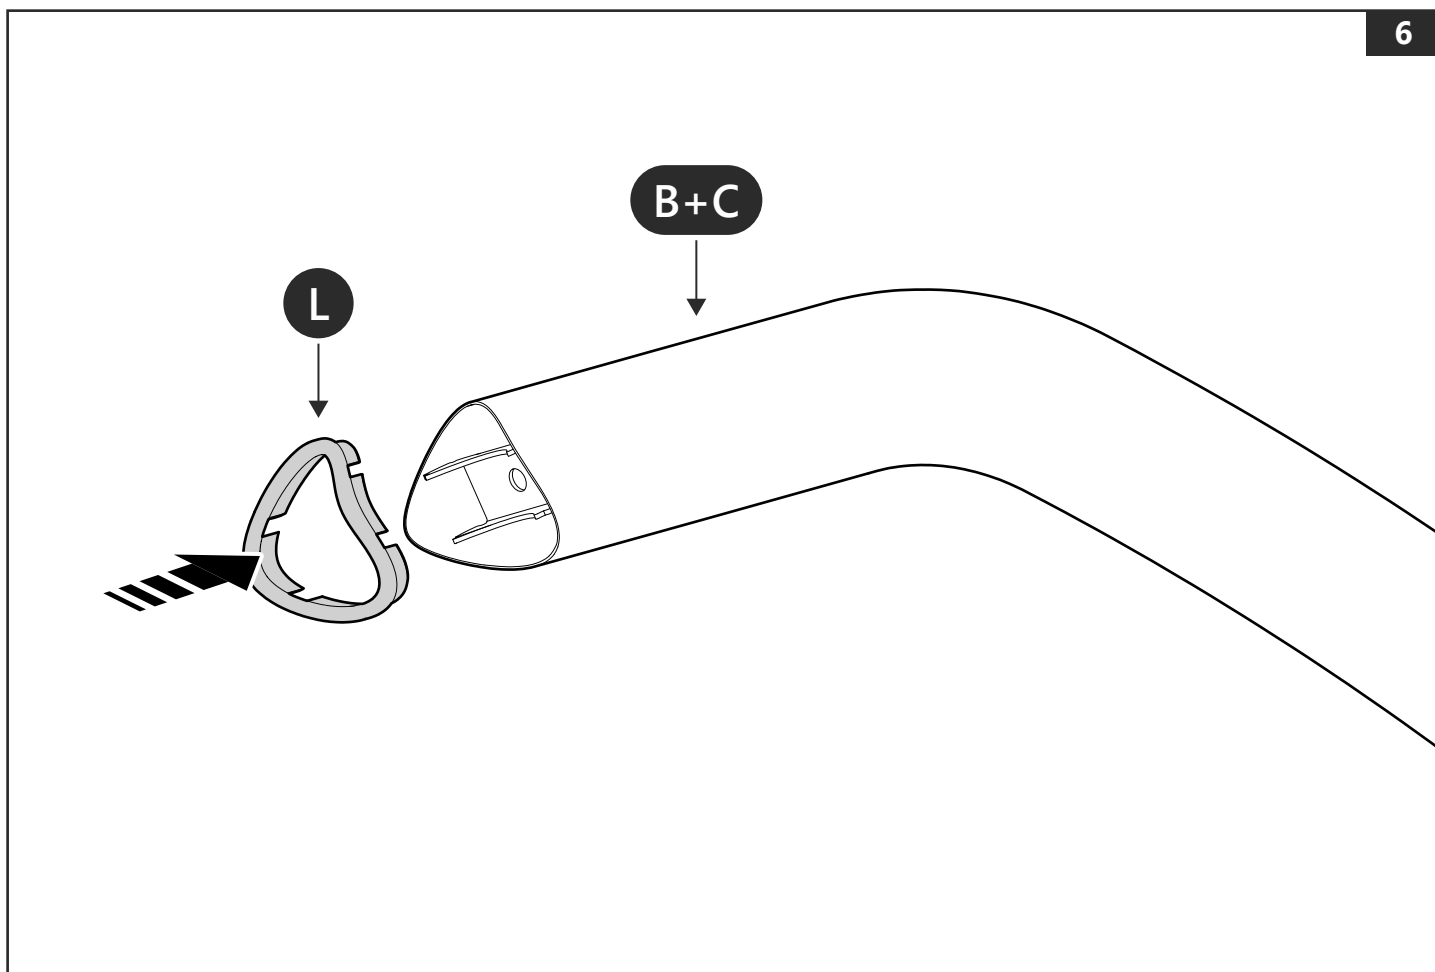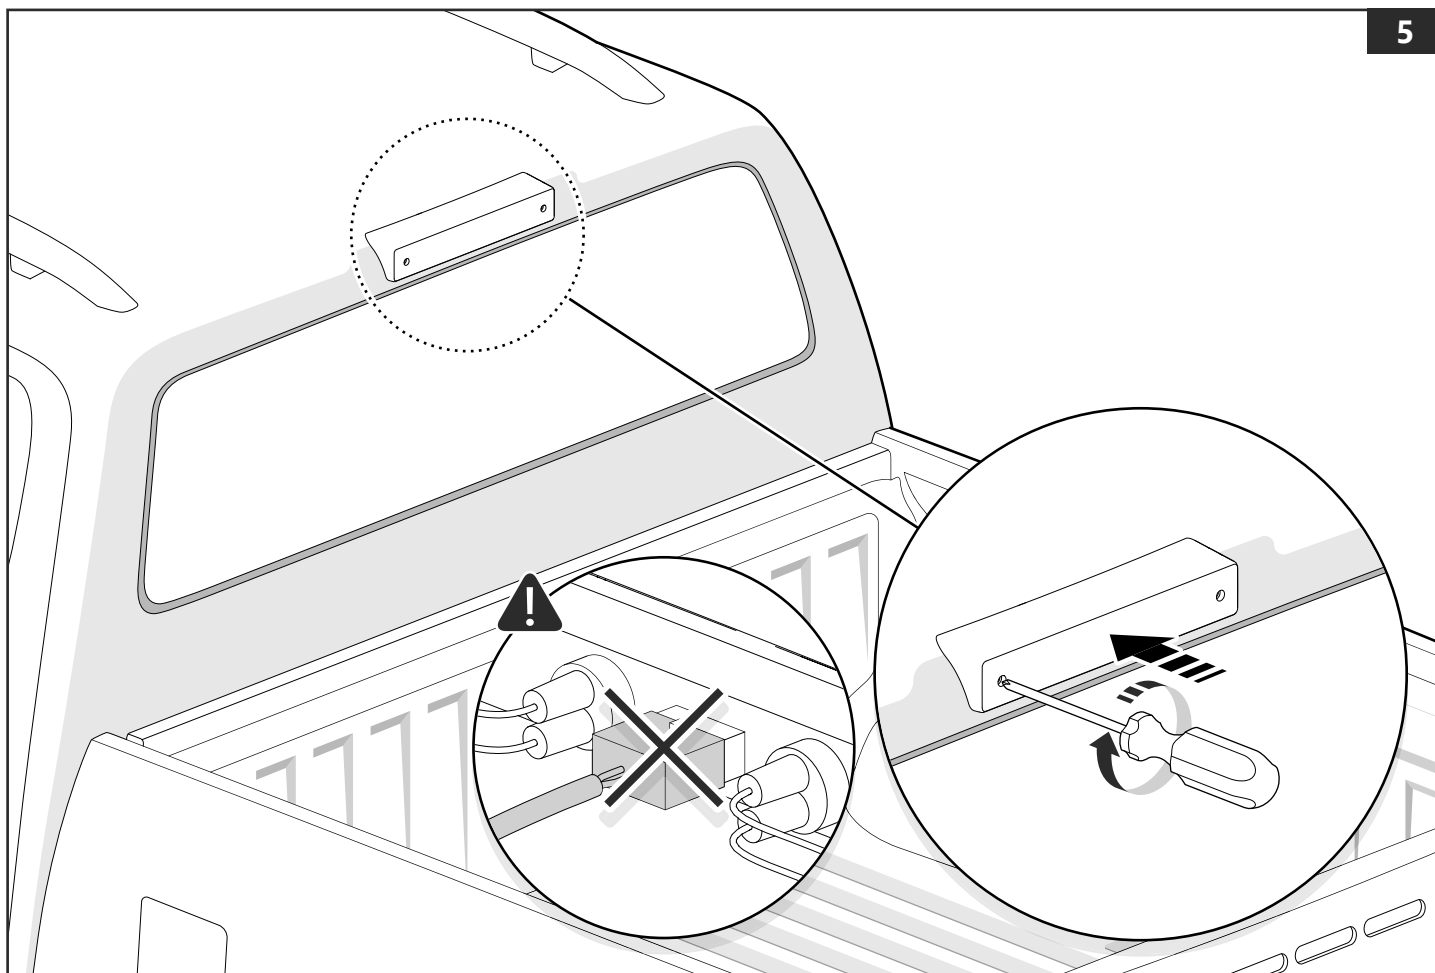

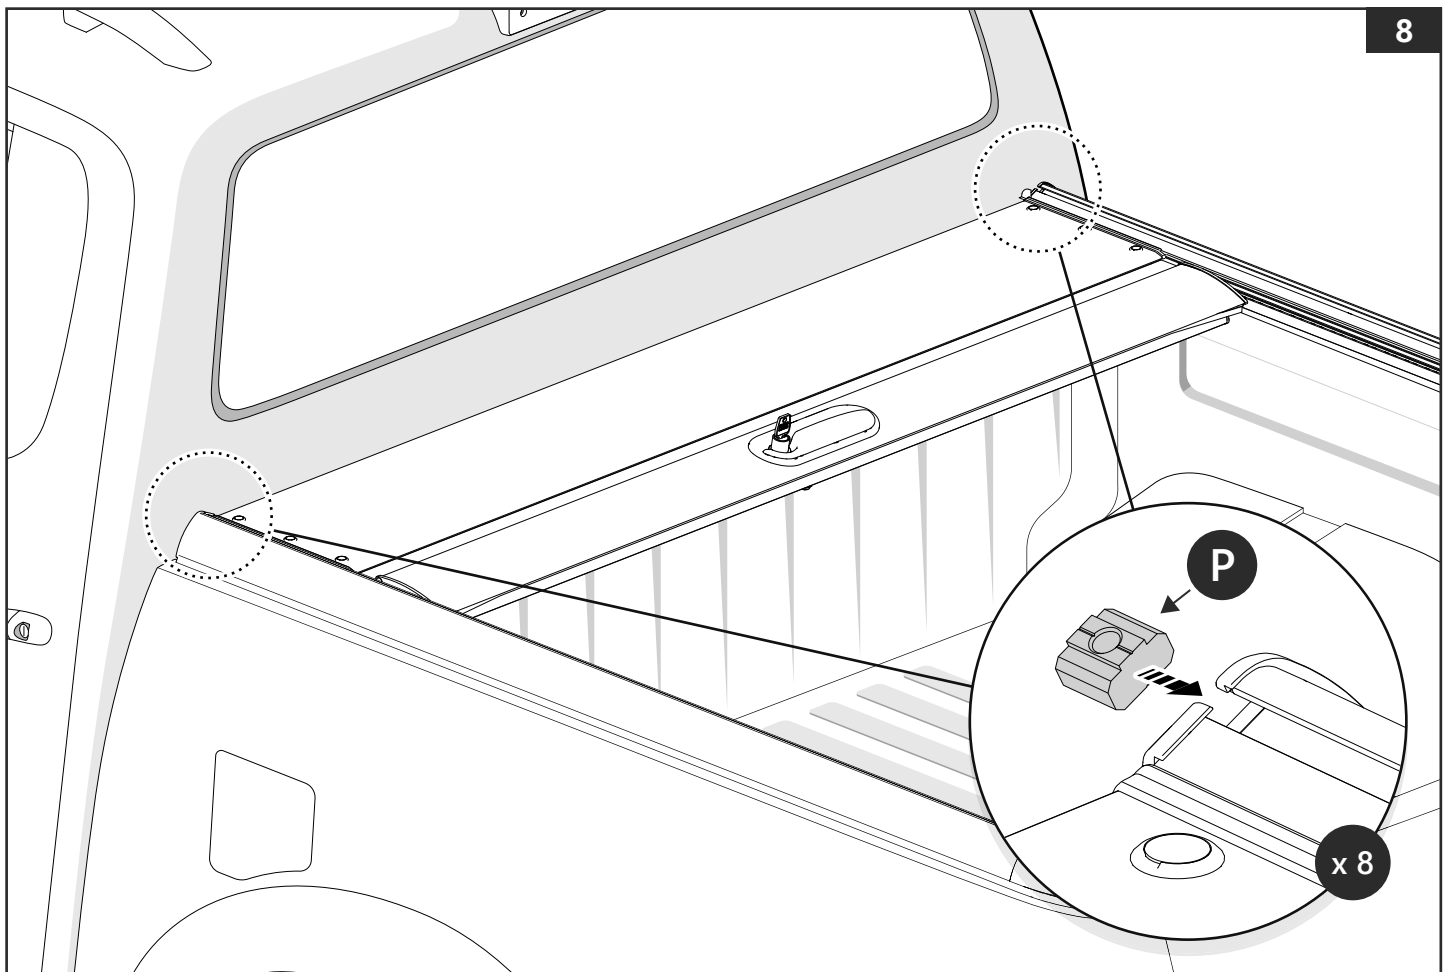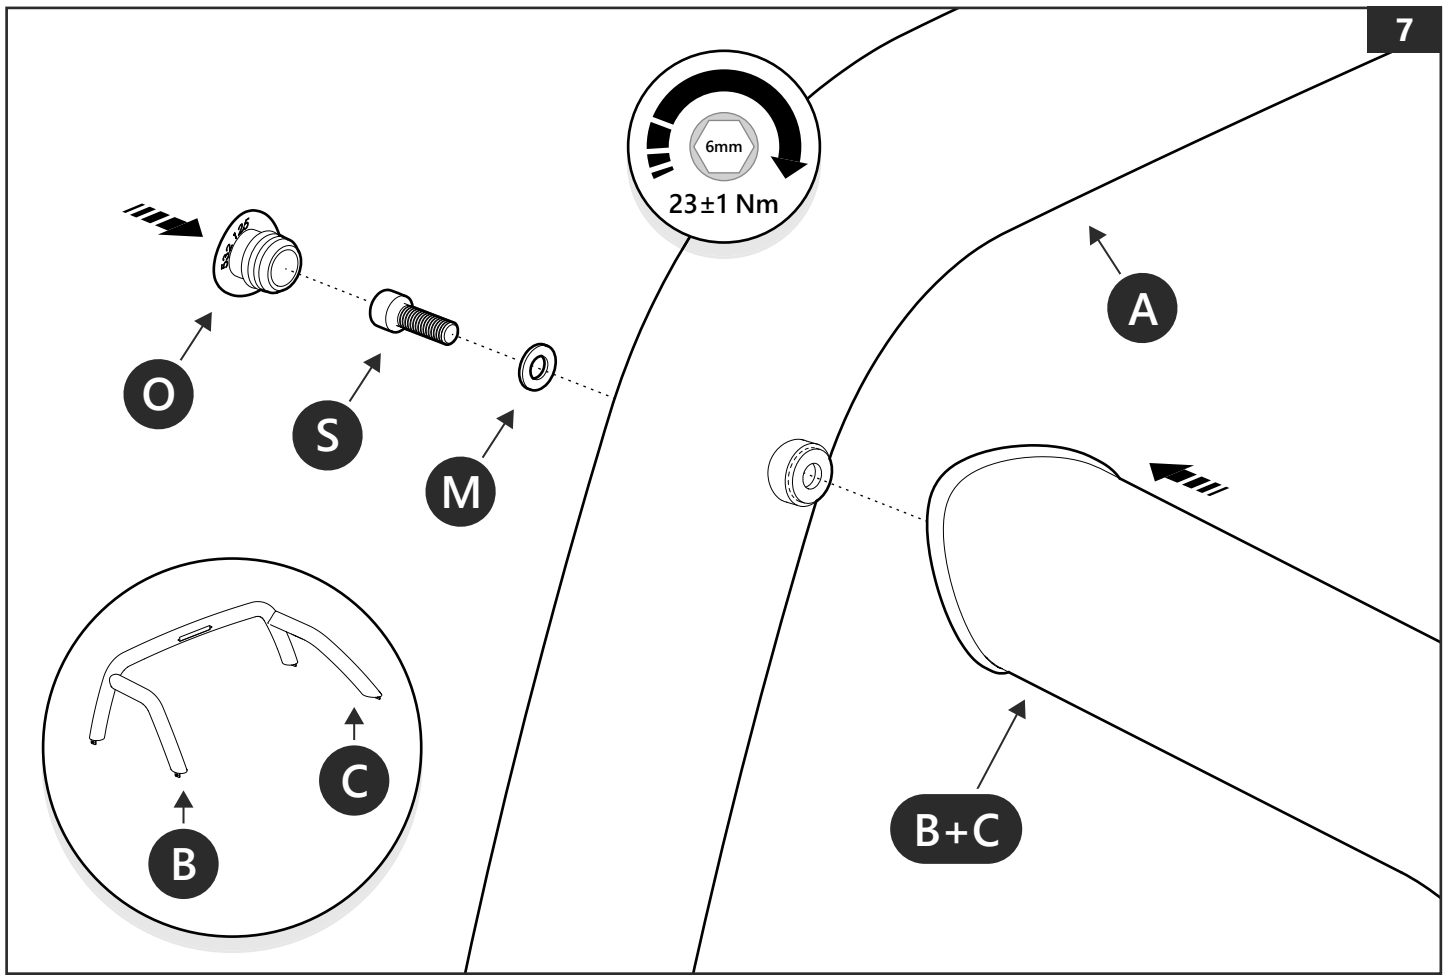


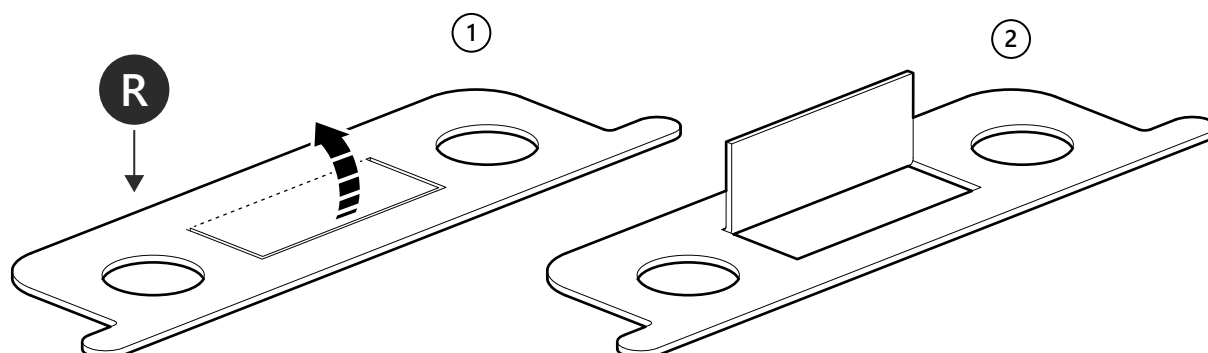
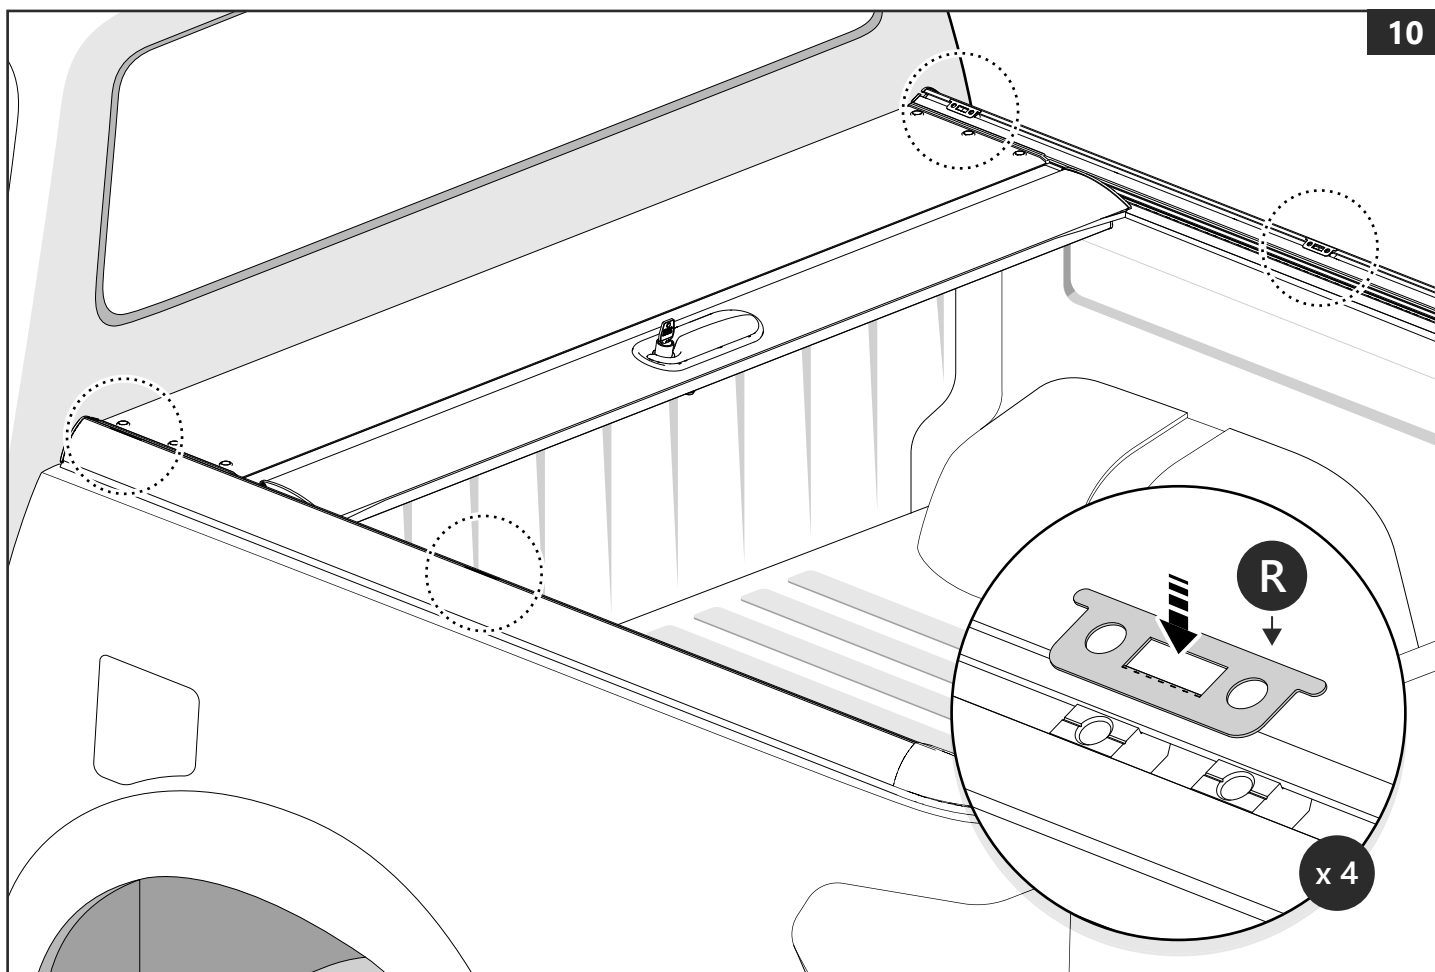
**x 4**

11

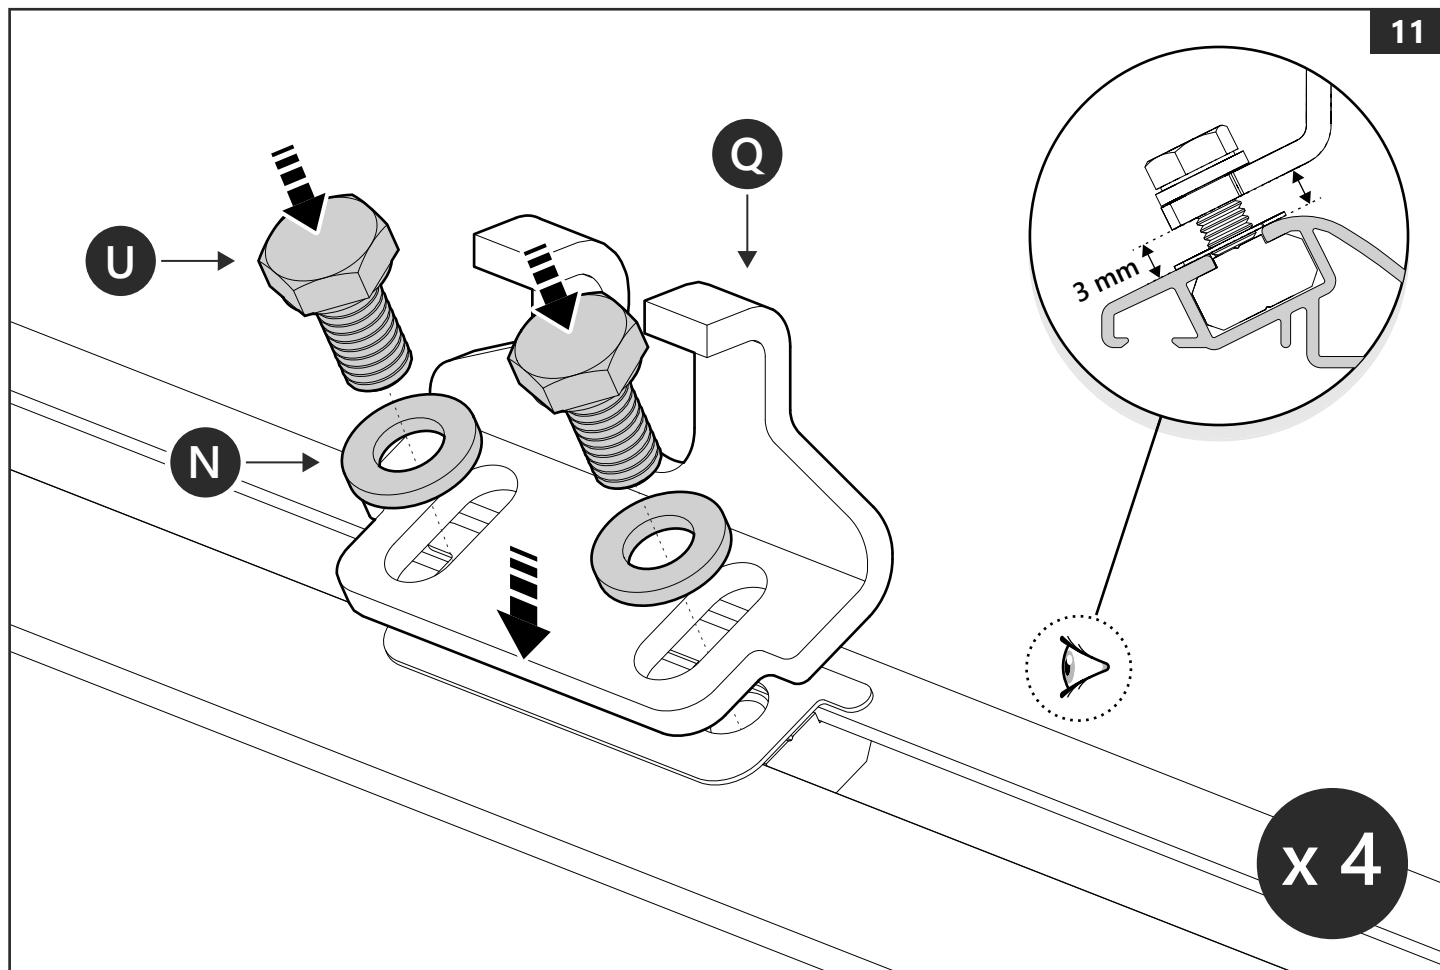


12

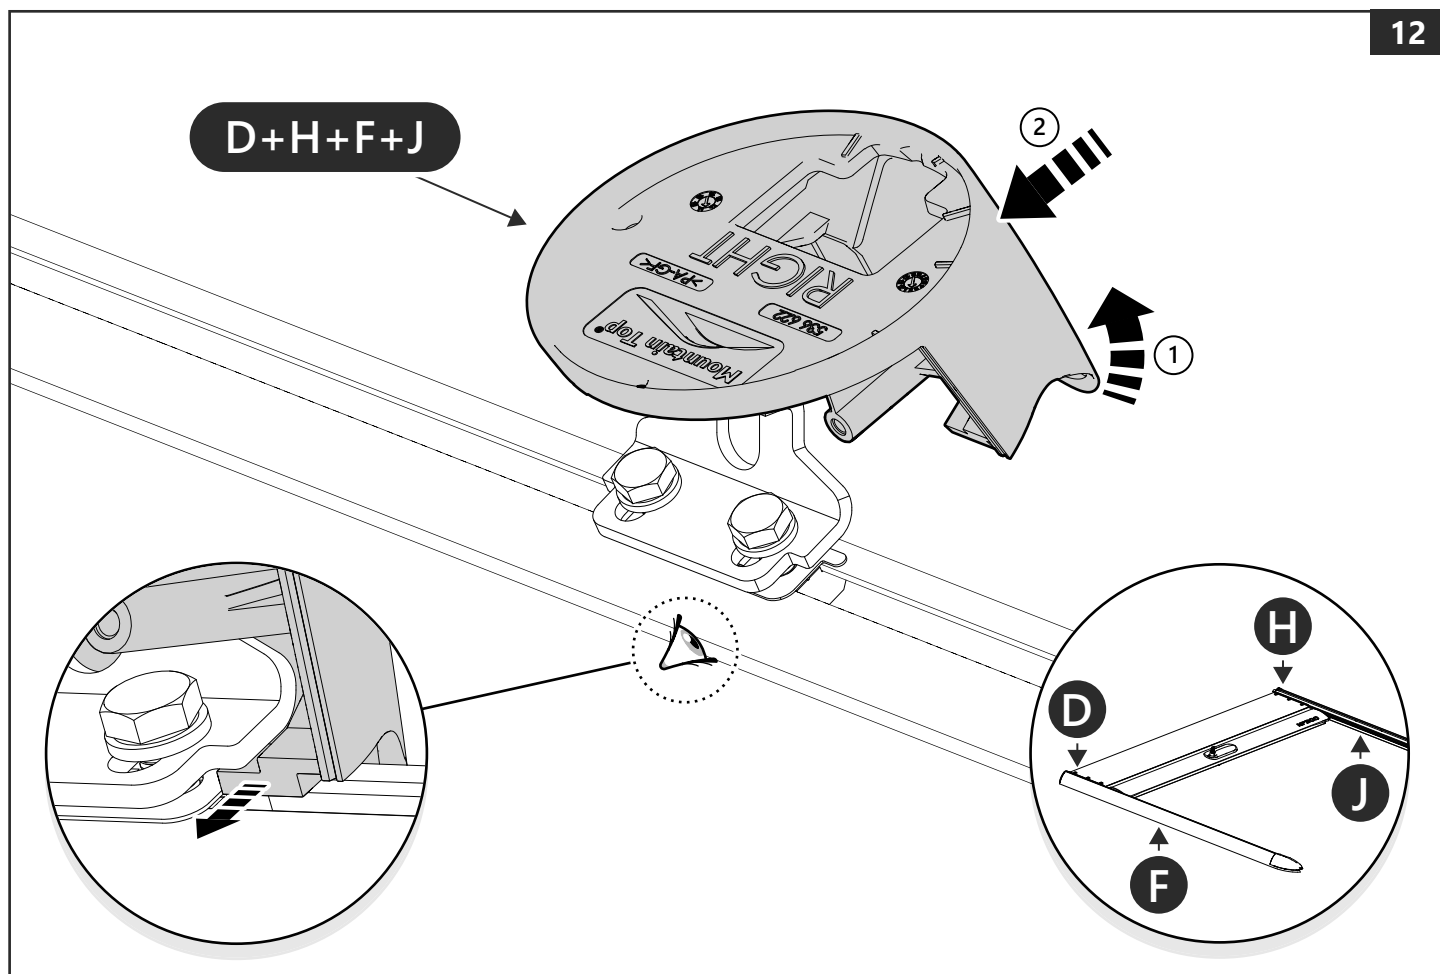


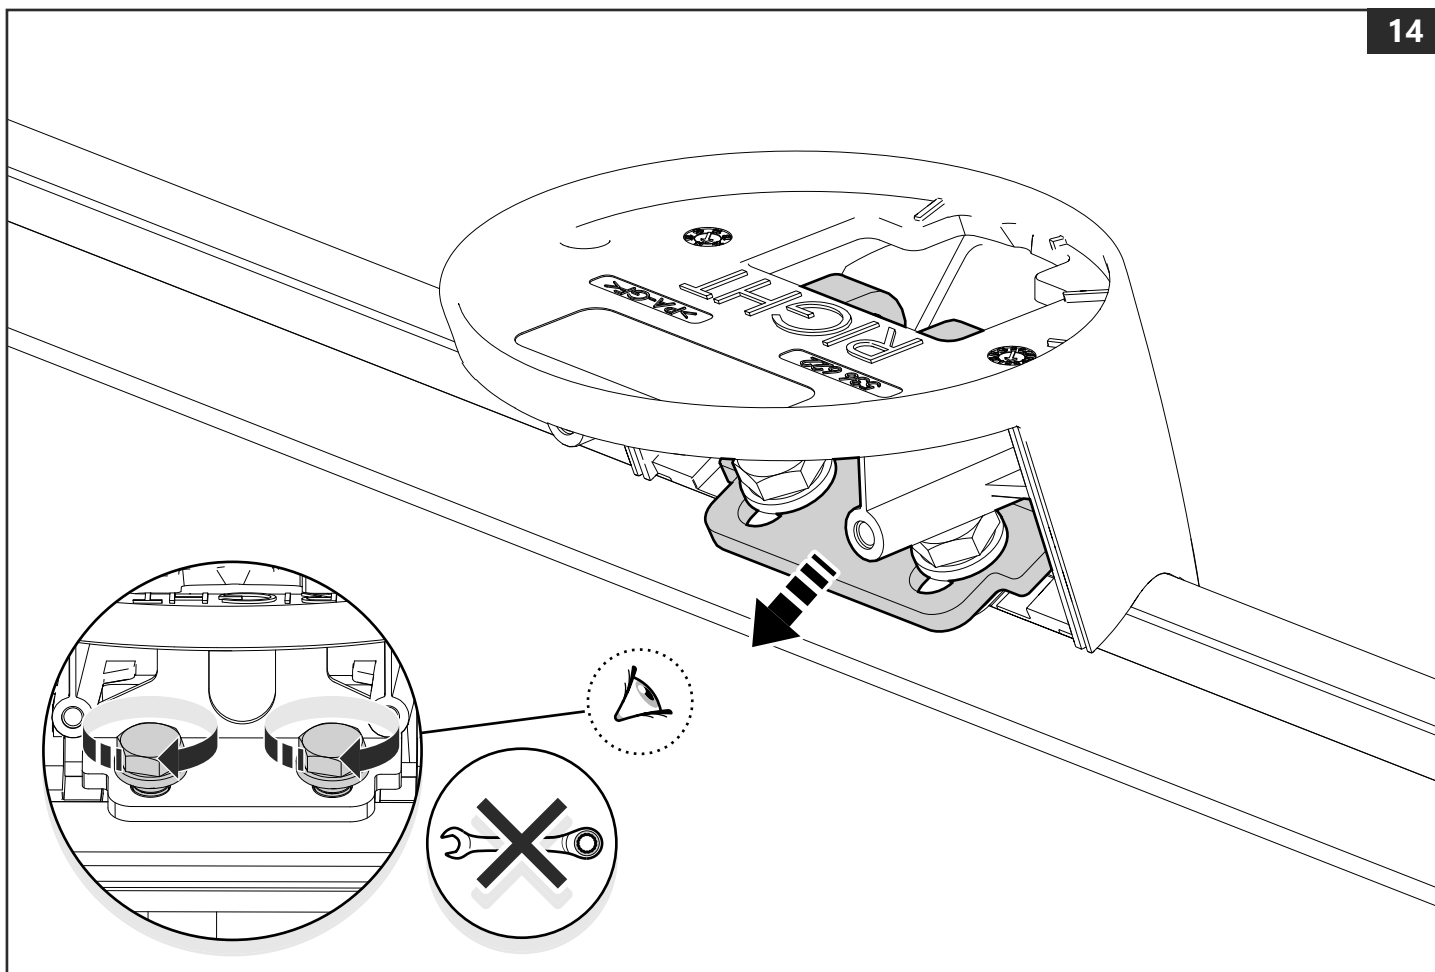
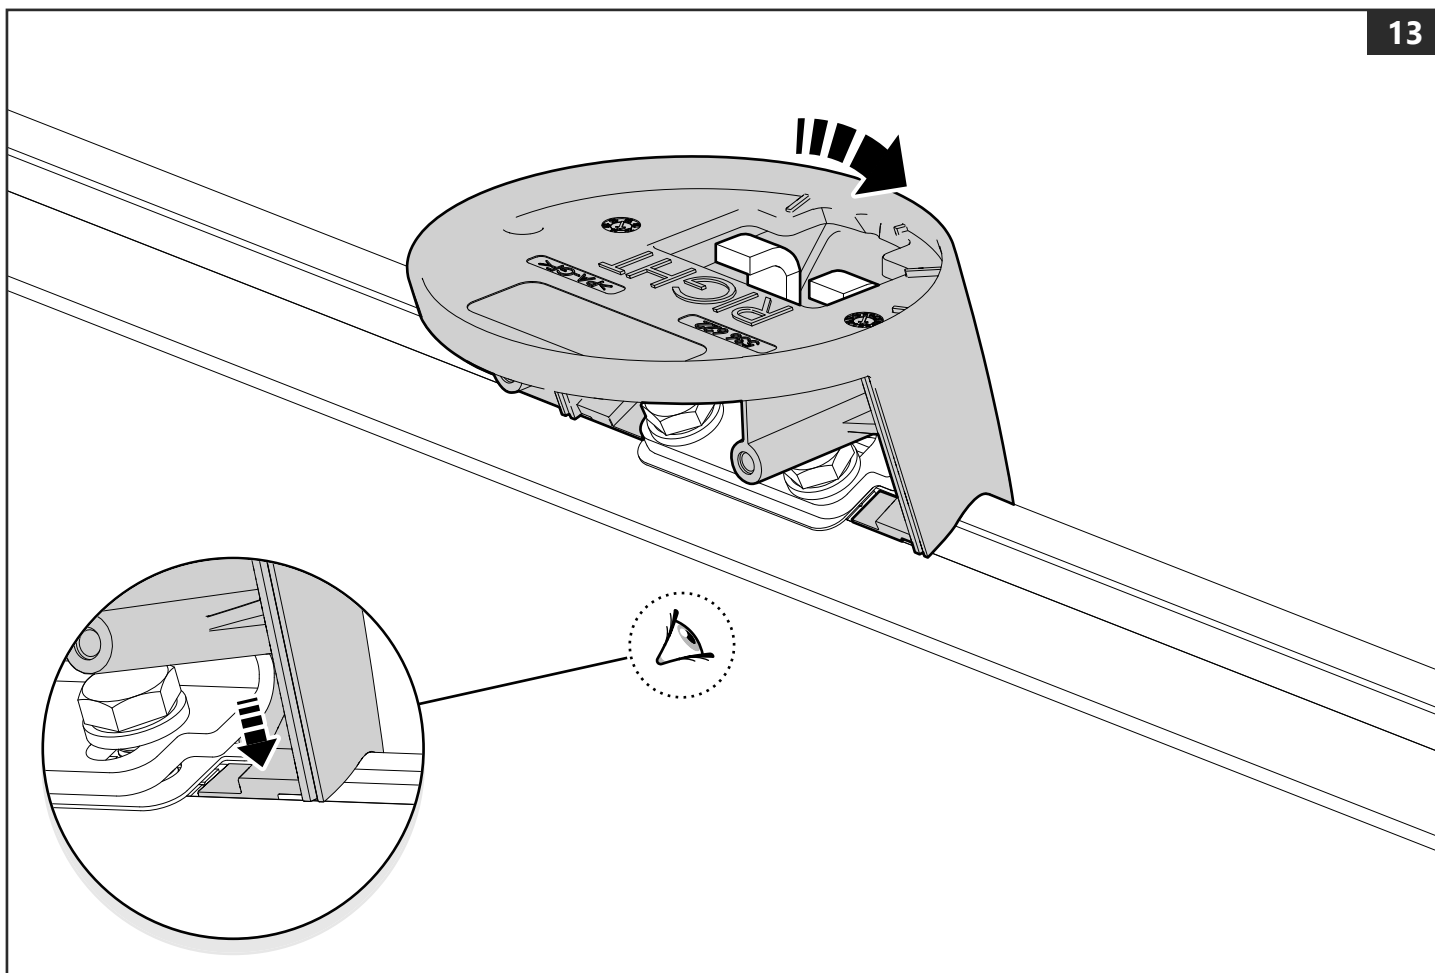




15


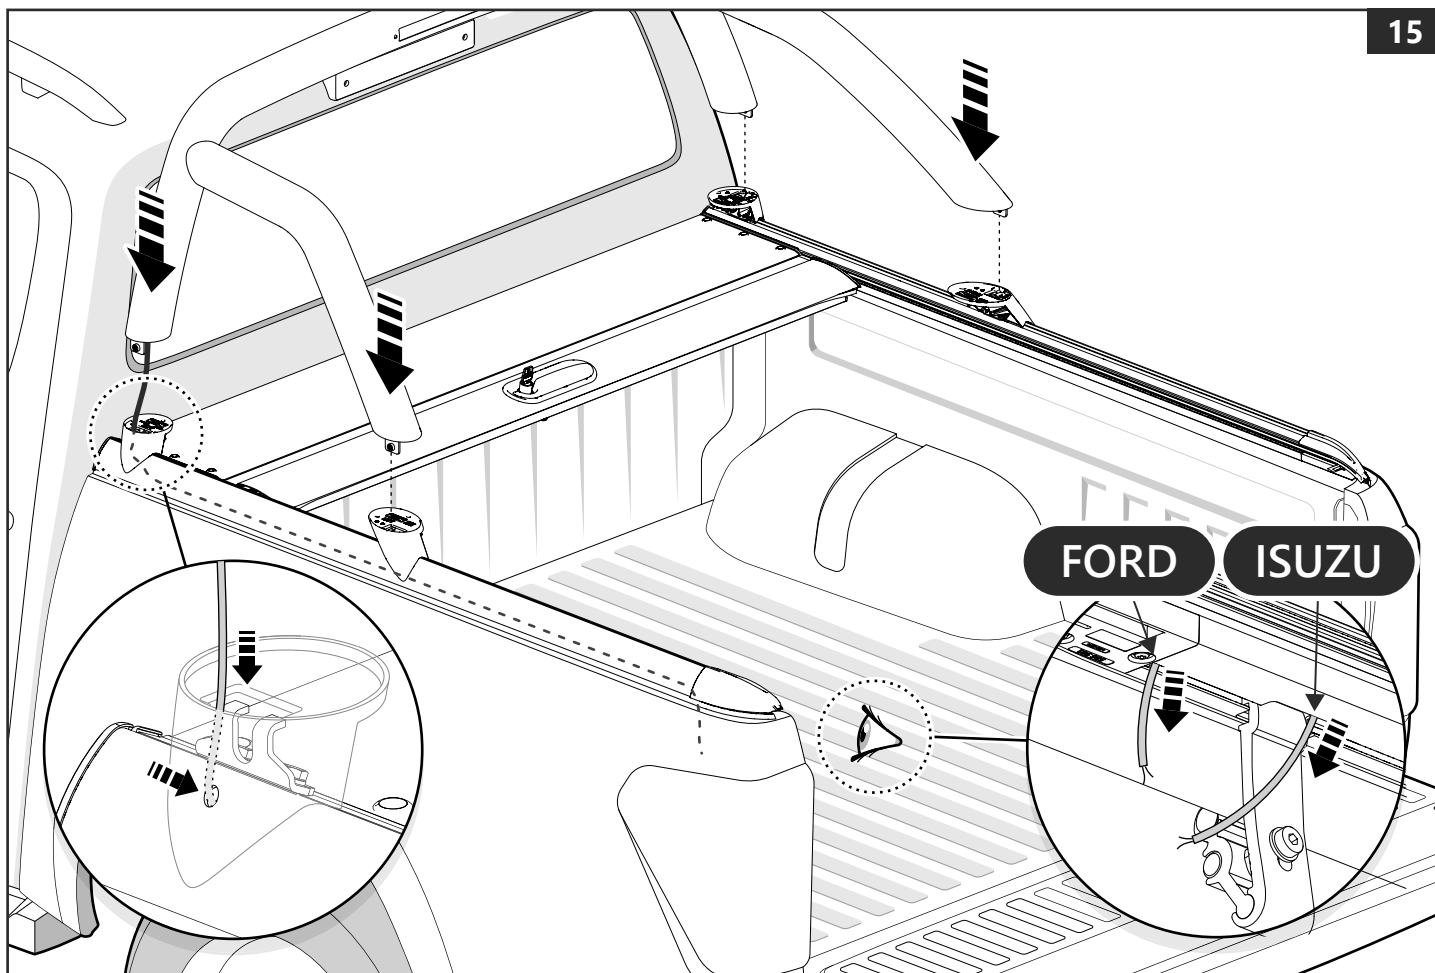




16

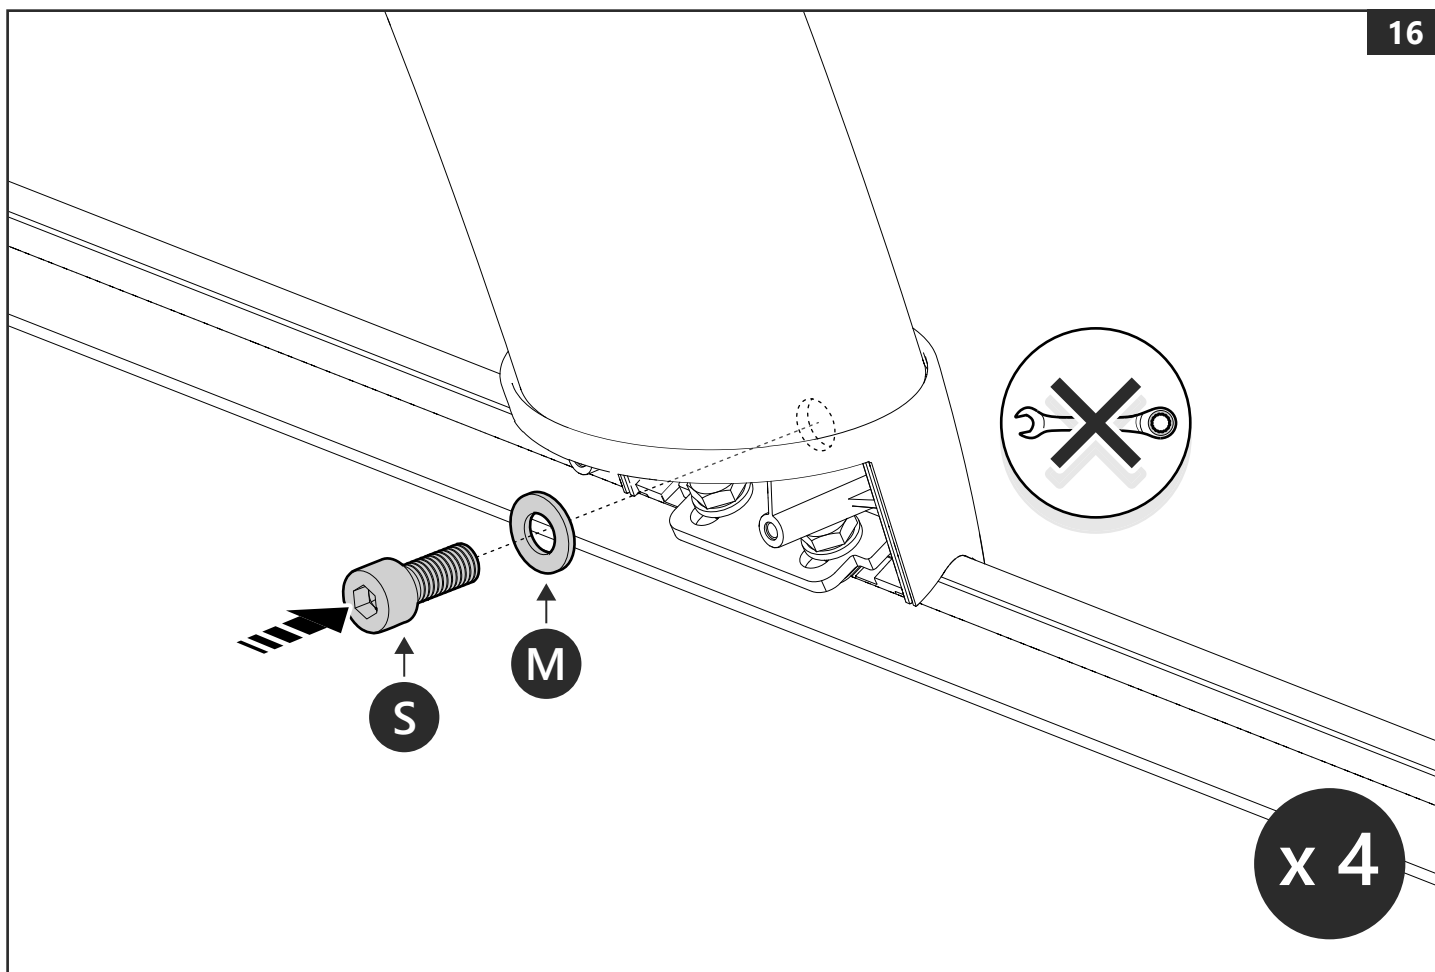

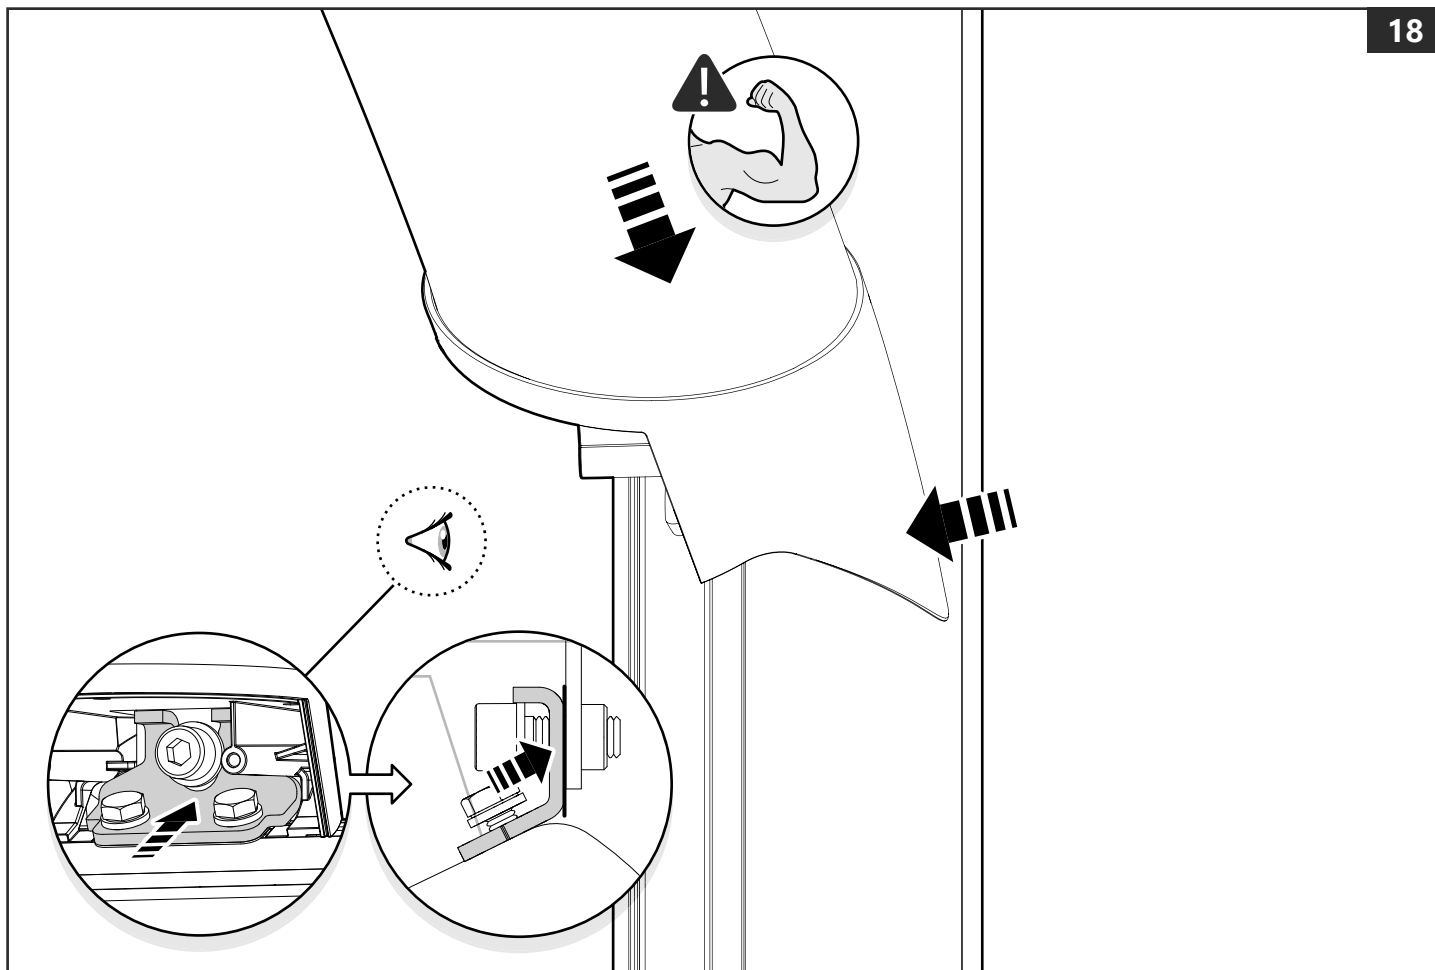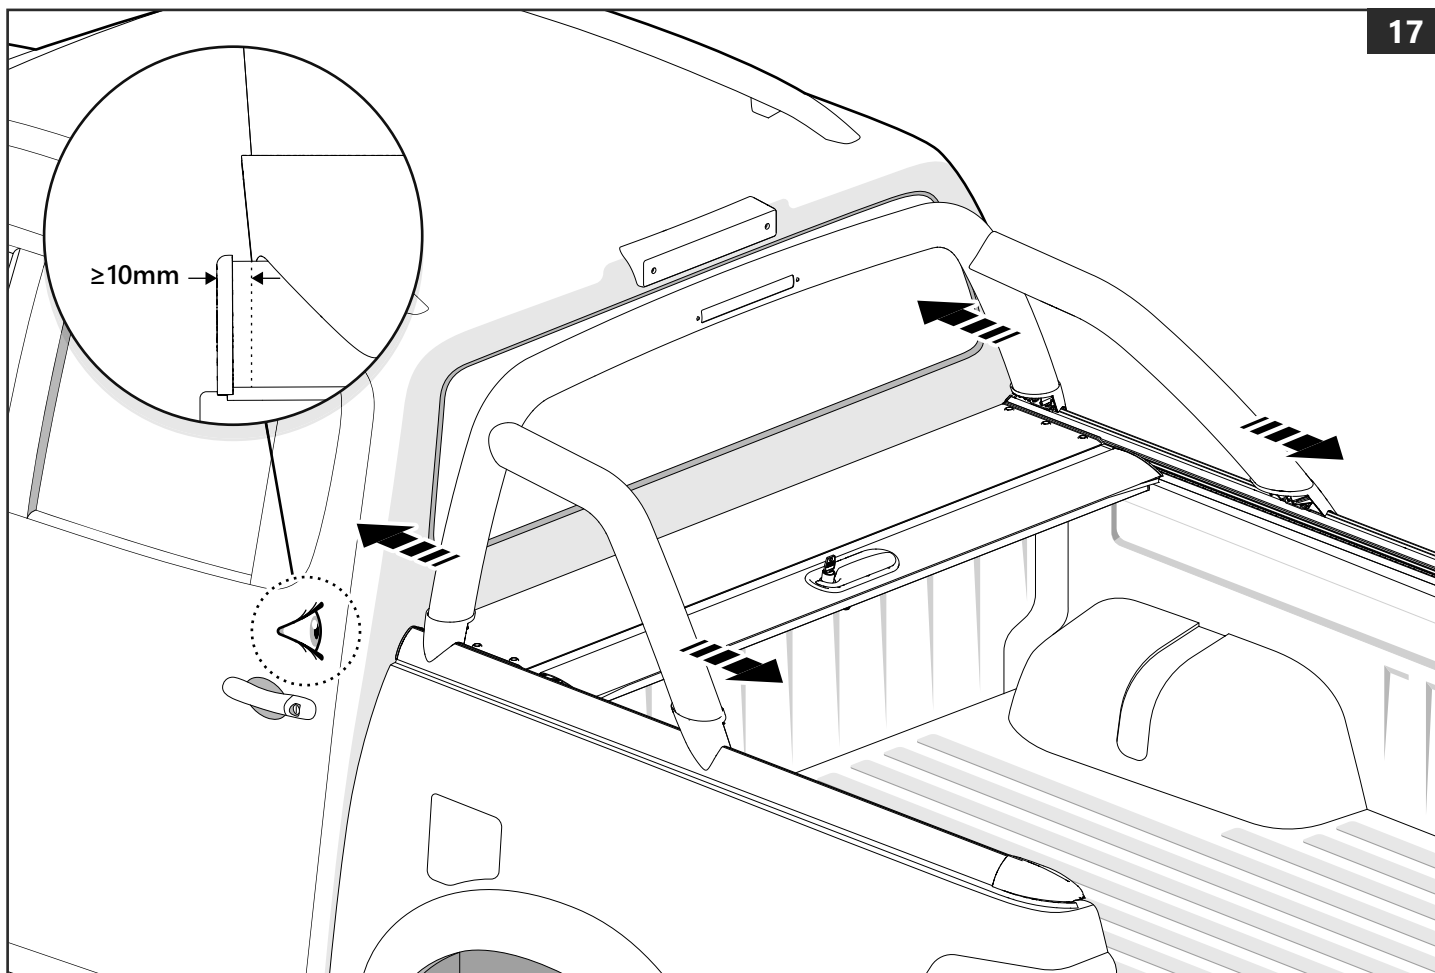

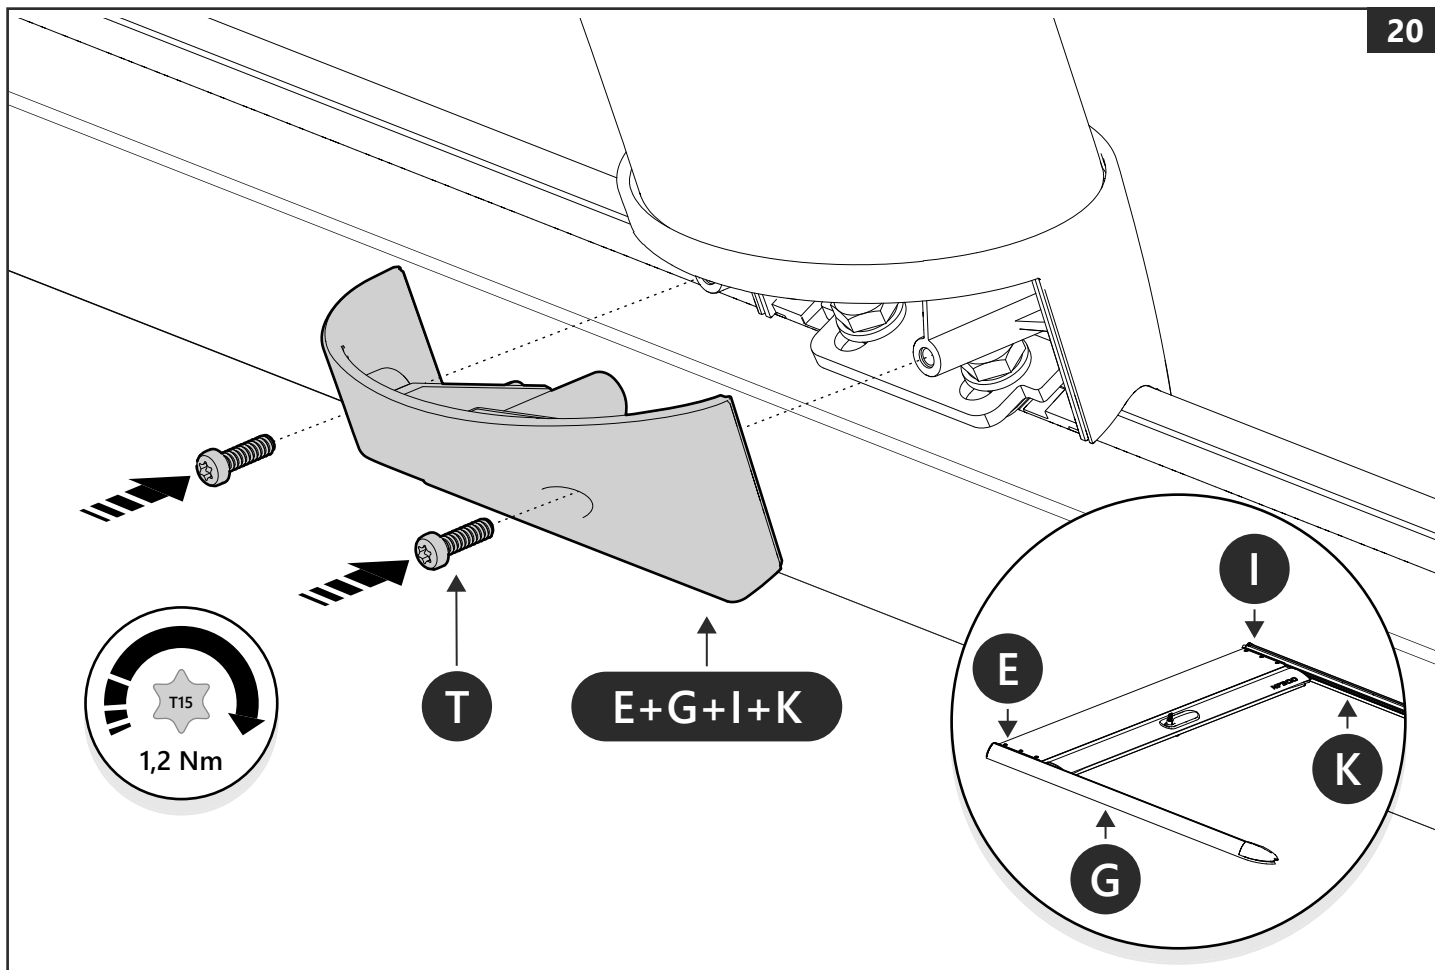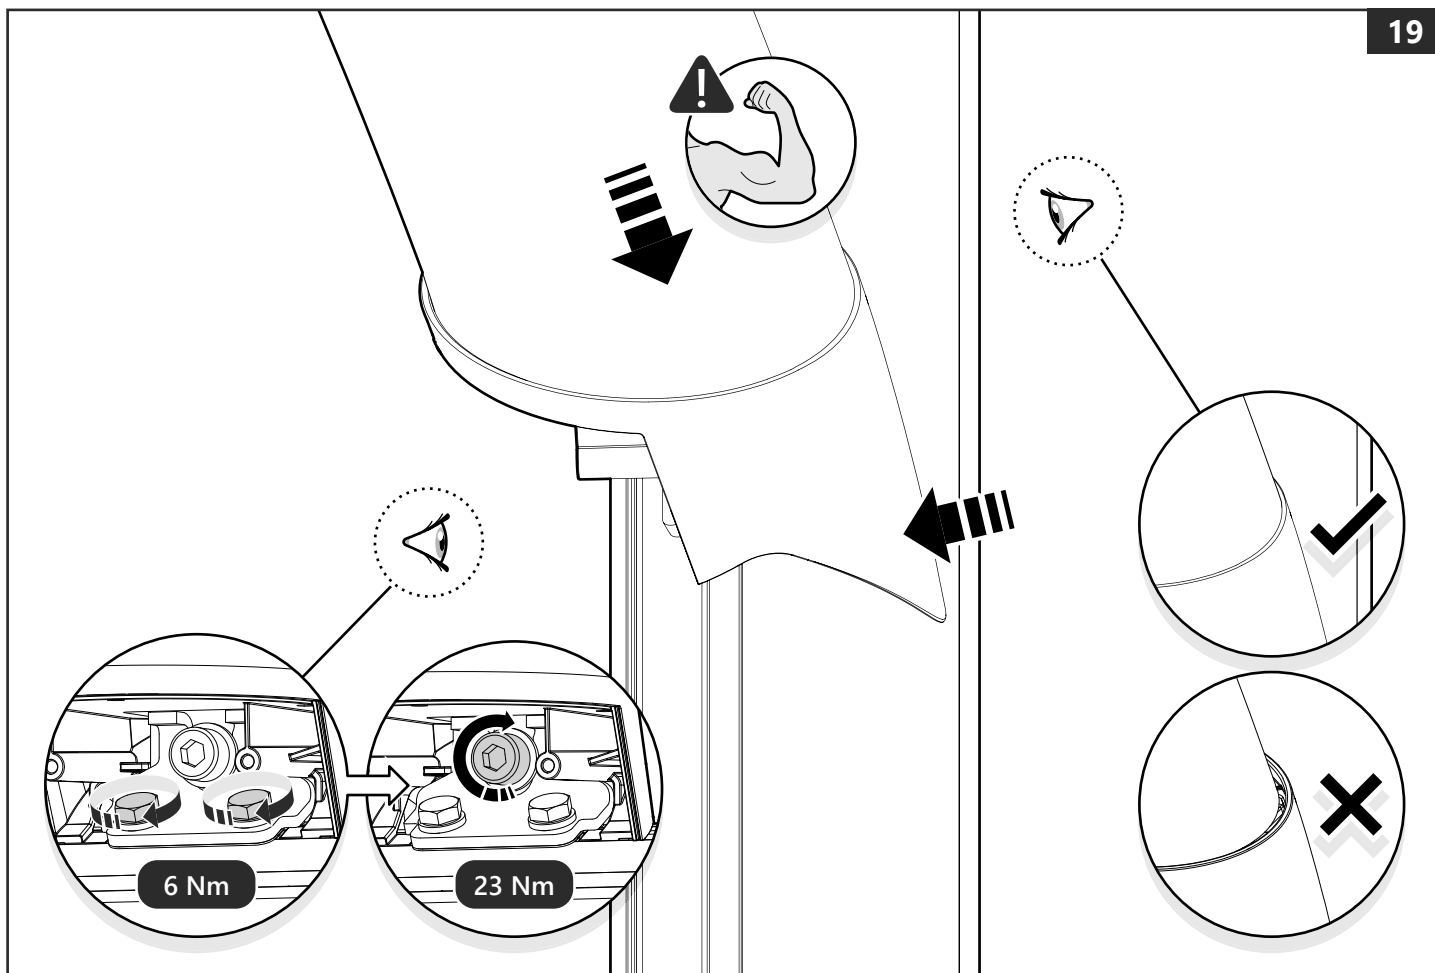

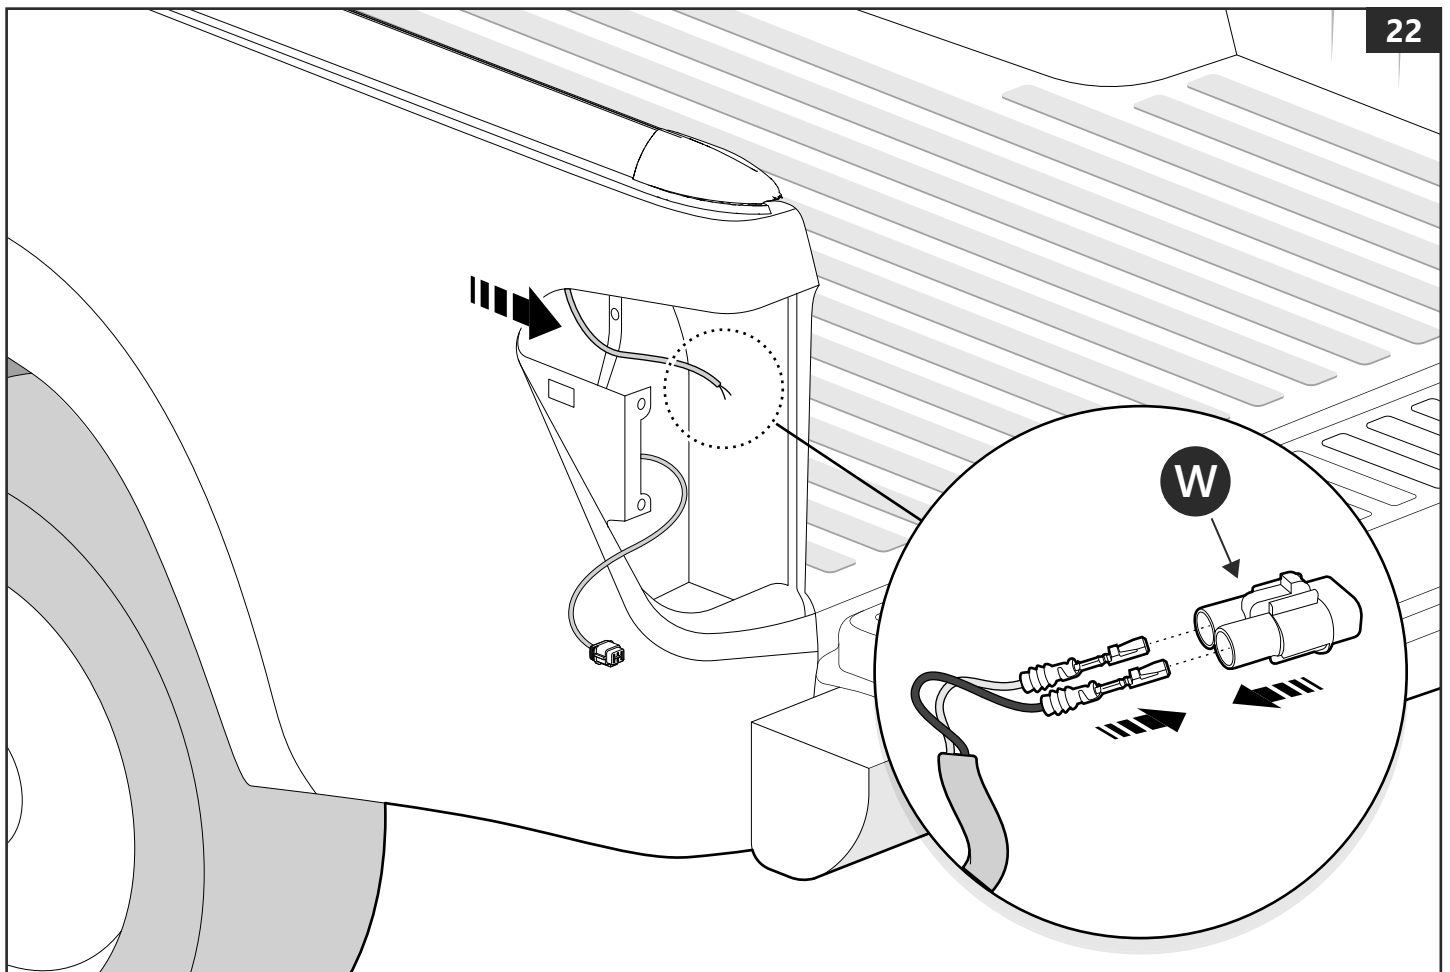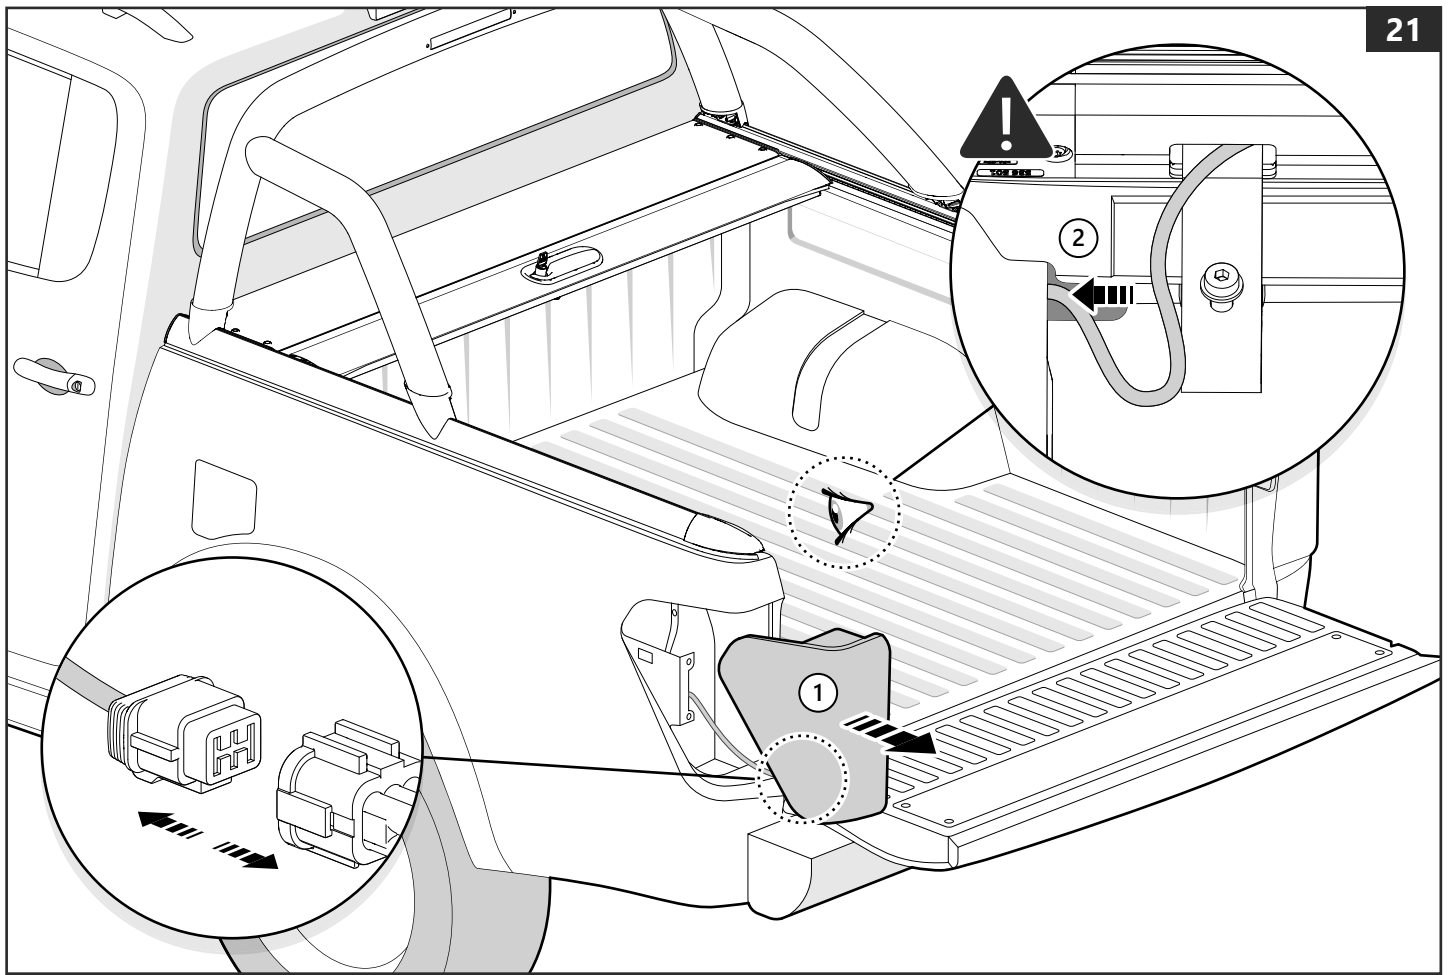

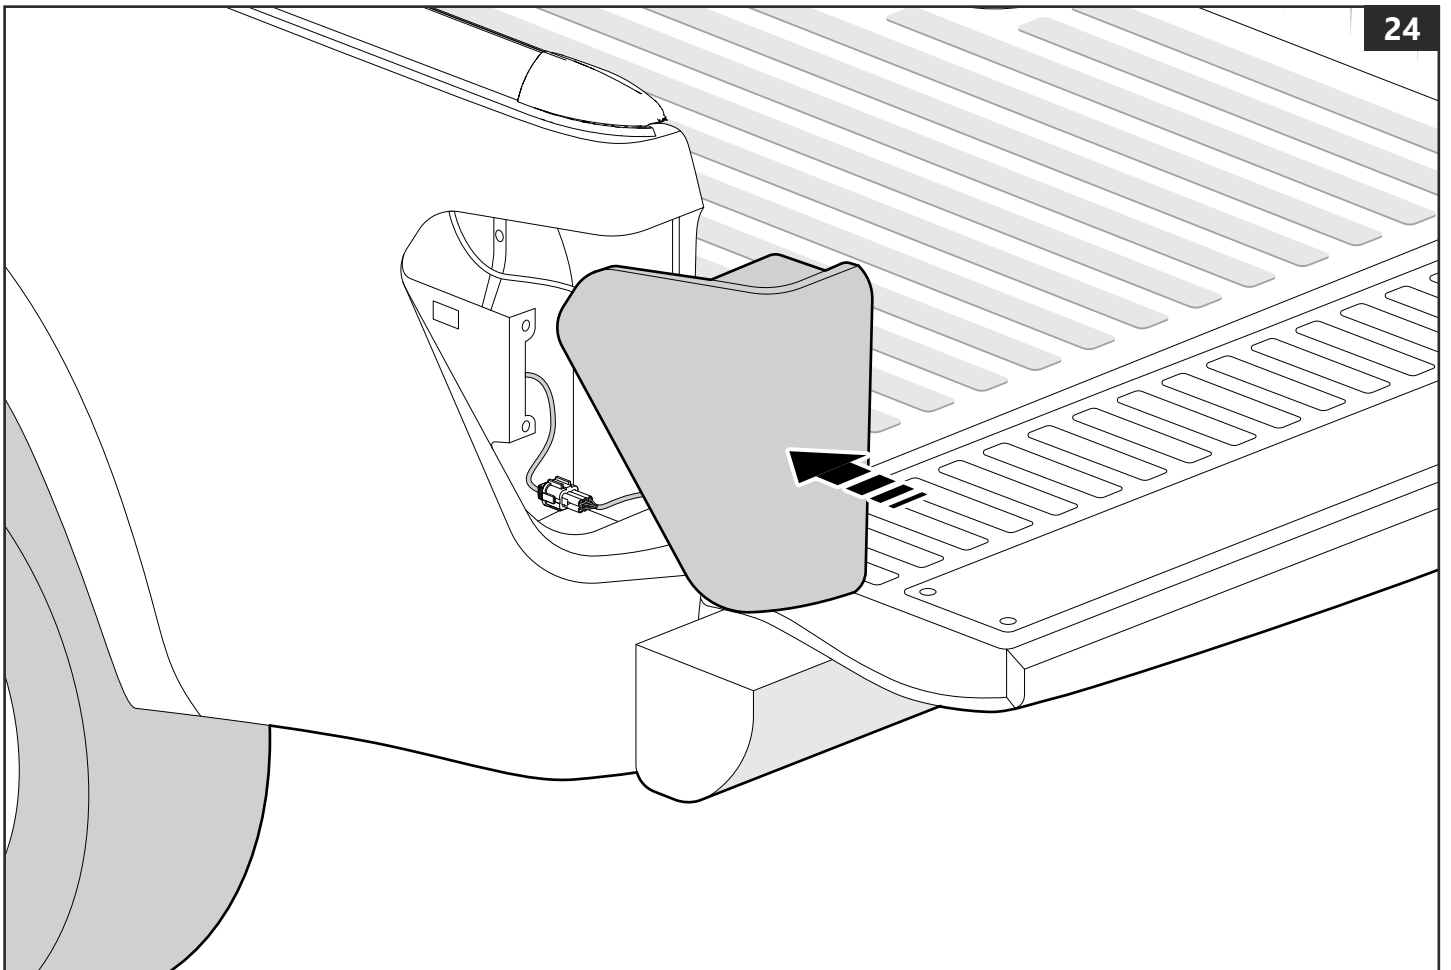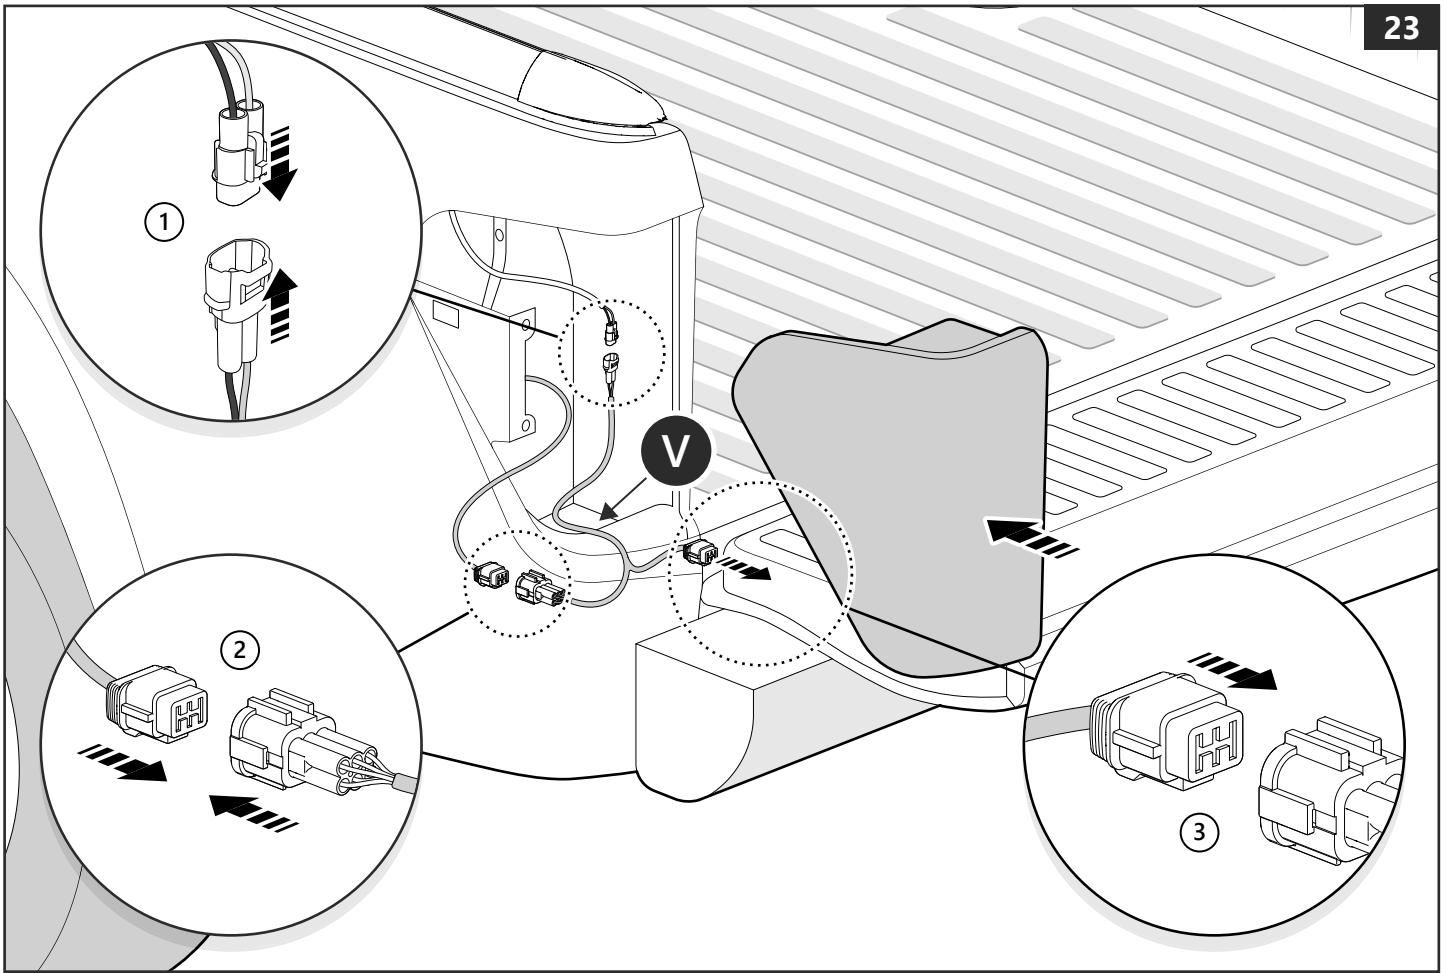



REFERENCES	MODELE / ANNEE	TYPE DE BENNE	TEMPS DE MONTAGE	POIDS
MTC295-ROLL/-B	Ranger / 2012+	Double / Super	2 heures	10 Kg

GB	Installation manual	S	Monteringsanvisning	D	Einbauanleitung
SF	Asennusohje	E	Instrucciones de montaje	CZ	Návod k instalaci
F	Notice de montage	H	Szerelési utasítás	I	Istruzioni de montaggio
PL	Instrukcja montażu	P	Instruções de instalação	GR	Οδηγίες Εγκατάστασης
NL	Installatie-instructies	RUS	Инструкция по установке	DK	Monteringsvejledning
TR	Montaj Talimatı	N	Monteringsveiledning	RO	Instructiuni de instalare